K656 Touch Sense Keypad Quick Start

Overview

- 1) 32-character blue LCD screen
- 2) One-touch keys (press and hold for 3 seconds to perform action: arm, sleep*, stay)
- 3) Erases current data entry or reverts to the preceding step
- Saves current data, exits current menu, or accesses a submenu

2. Select from the following options (see Arming

Press [STAY] to arm the area's perimeter only.

- 5) Panic keys (police, medical, and fire)
- 6) Menu key (press to access options)

To arm your system when exiting:

Description

Enter your [ACCESS CODE].

Select the desired area.

For global press [0].

Know-how for more details). Press [ARM] to regular arm. Press [2] to force arm. Press [3] to instant arm.

- 7) AC Light
- 8) Arrow keys use to scroll the menu options
- * Reserved for future use

How to Arm

Step

1.

3.

How to Disarm

To disarm your system when entering:

Step	Description
1.	Enter your [ACCESS CODE].
2.	Press [OFF] if you are disarming your system from within a perimeter, otherwise proceed to step 3.
3.	Select the area(s) if necessary. For global press [0] .



P A R A D O X[®] security systems

Alarm Memory Display

To view the alarms that occurred during the last armed period:

Step	Description
1.	Press [MENU].
2.	Press [4]. All zones that were breached during the last armed period will be displayed. Use the up and down arrow keys to view zones.
3.	Press [CLEAR] to exit.

How to Bypass Zones

When a zone is bypassed, it remains unarmed once the corresponding area is armed:

Step	Description
1.	Press [MENU].
2.	Press [3] to bypass zone.
3.	Enter your [ACCESS CODE] if required.
4.	Press [1] to select the zone.
 Use the up and down arrow keys to scroll throug the zones and then press [ENTER] for the desired zone. 	
6.	Press [CLEAR] to exit.

Panic Keys

To send a silent or audible alarm to your security company, press and hold one of the panic keys for three seconds.

Panic Key	Description
	Police
\triangle	Medical
	Fire

Arming Know-how

The following table provides a description of the different types of arm levels.

Arming Type	Description
Regular Arming	Arms the entire area when all zones are closed.
Force Arming	Arms the entire area without waiting for all zones to close.
Stay Arming	Arms the area's perimeter only, allowing you to remain in the protected area.
Disarming	Disarms the entire area, regardless if zones are open or closed.

© 2010 Paradox Security Systems Ltd. All rights reserved. Specifications may change without prior notice. For complete patent, trademark, certification, and warranty information, please visit www.paradox.com.