

DMR21 work mode setting

Old DT37M/DT47M (3 bits DIP): Set the DIP1 to ON on DT47M or DT37M.

Go into main menu, and touch 2Easy logo into information interface.

Long press unlock icon into **PROPERTY SETUP** setting interface

New DT37MG/DT47MG(6 bits DIP) :

Go into main menu, and touch 2Easy logo into information interface.

Long press unlock icon into **INSTALL SETUP** setting interface, press unlock icon and hold for 3 seconds, it would go into **PPROPERTY SETUP**

Input **1#34#0264#1#0#00#** to set as **Normal** work mode

Input **1#34#0264#1#0#01#** to set as **128 apartments** work mode

Input **1#34#0264#1#0#02#** to set as **Router** work mode

Input **1#34#0264#1#0#03#** to set as **Gateway** work mode