



INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT

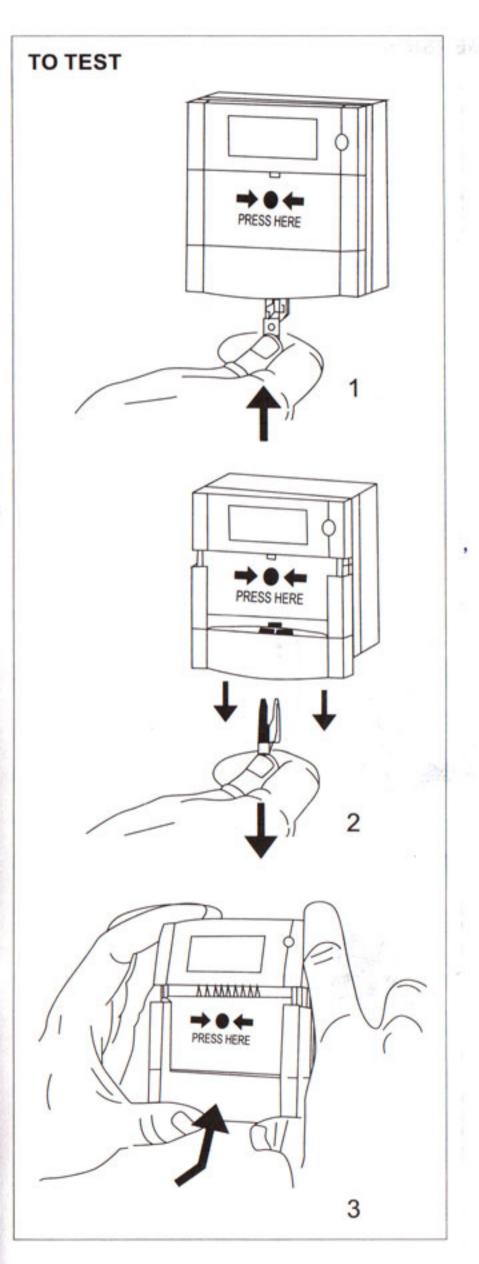


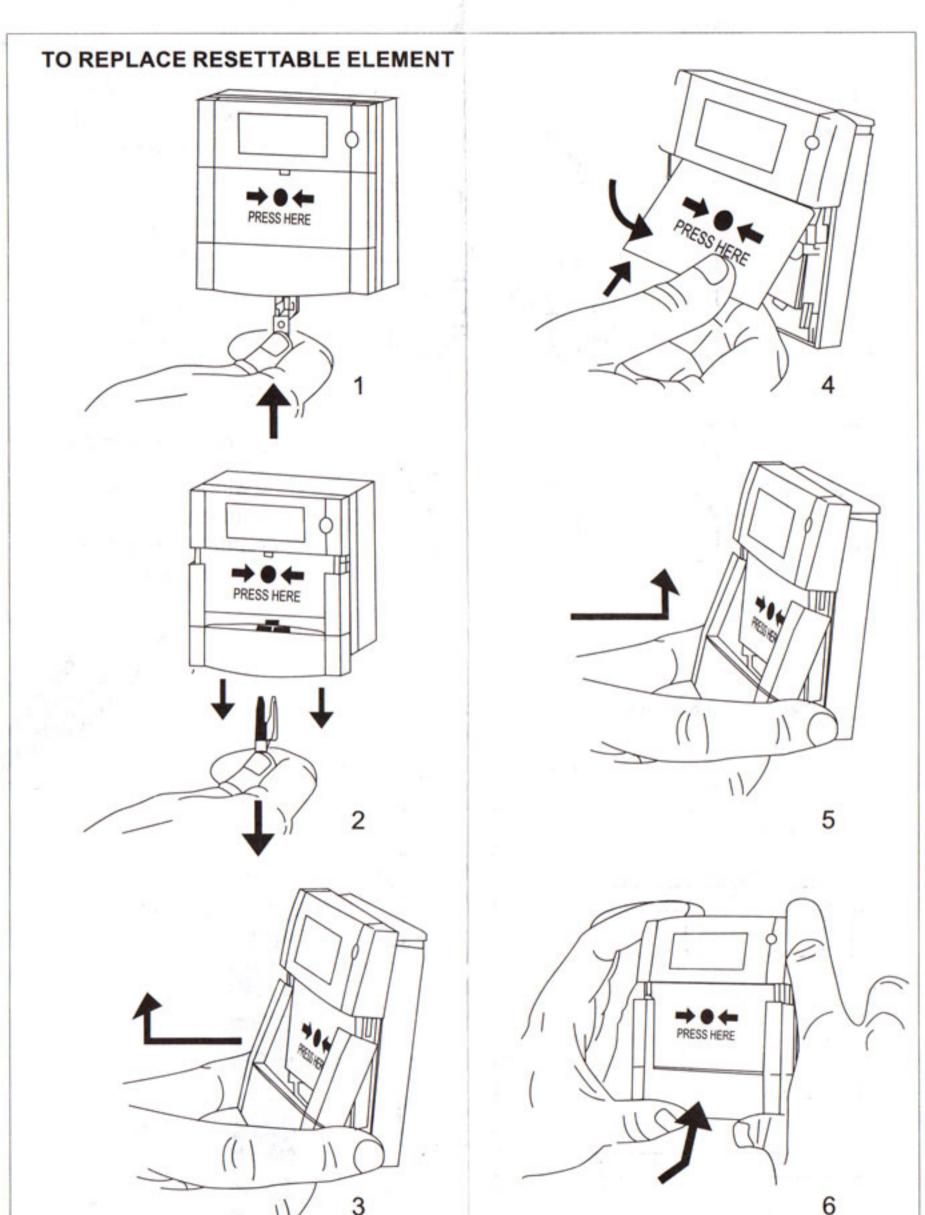


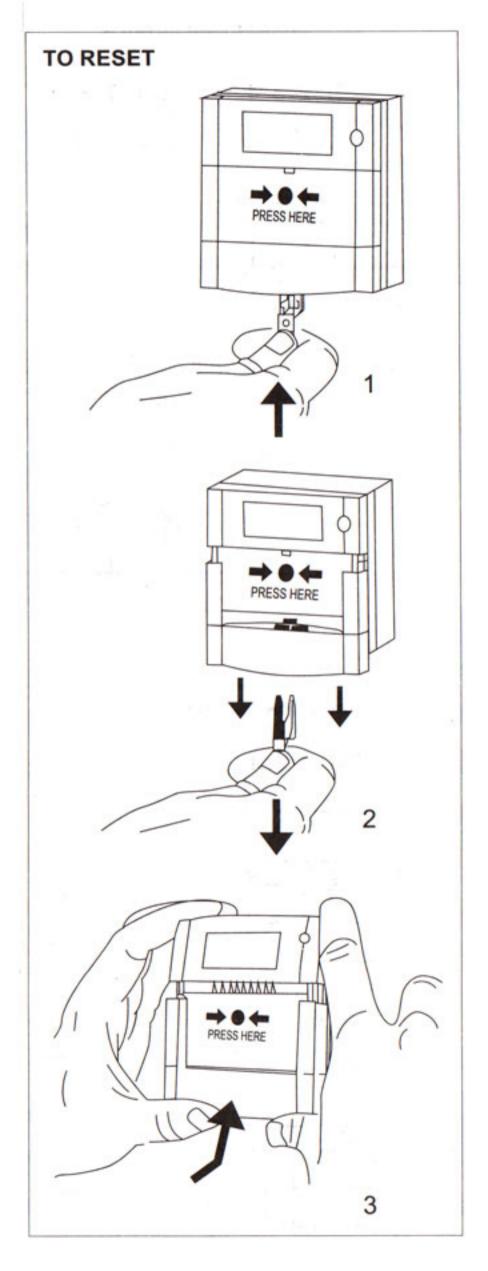

INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT

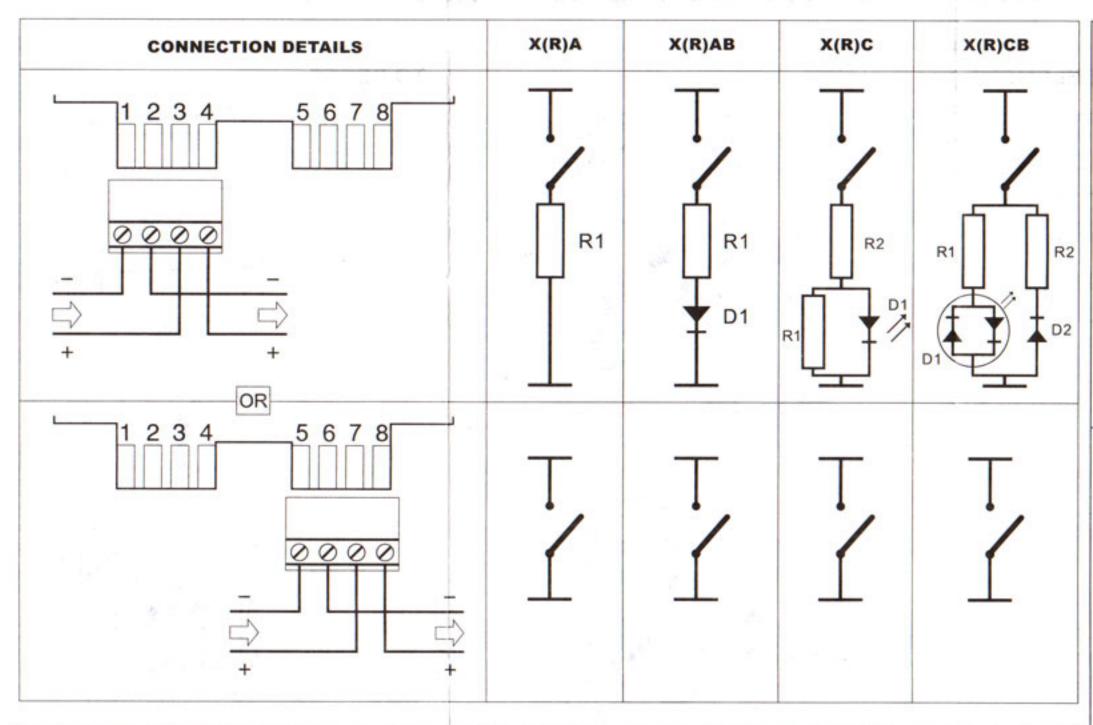

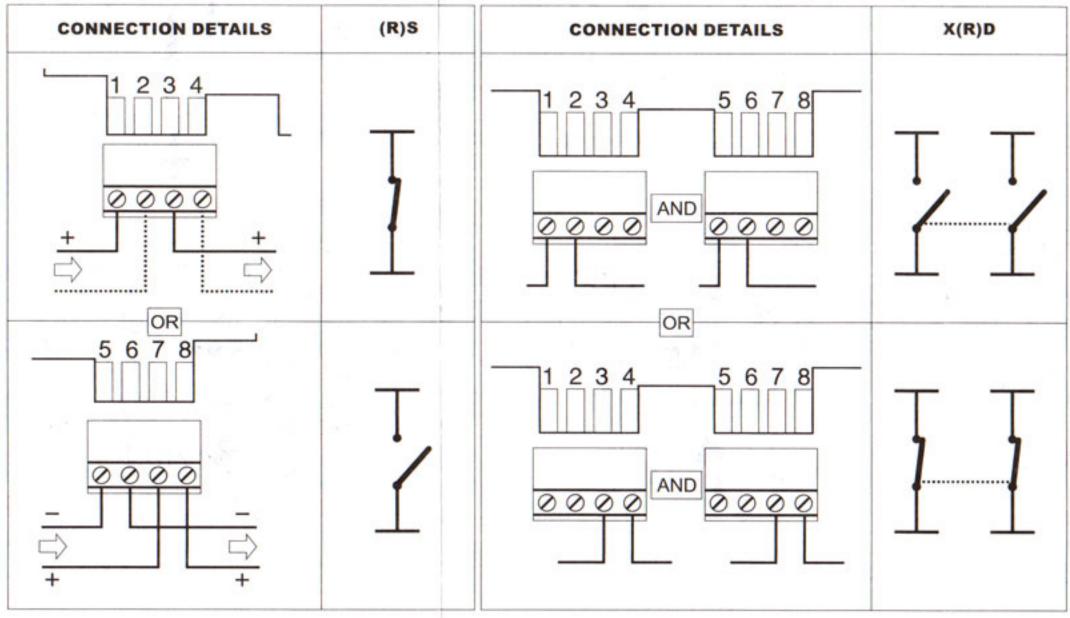

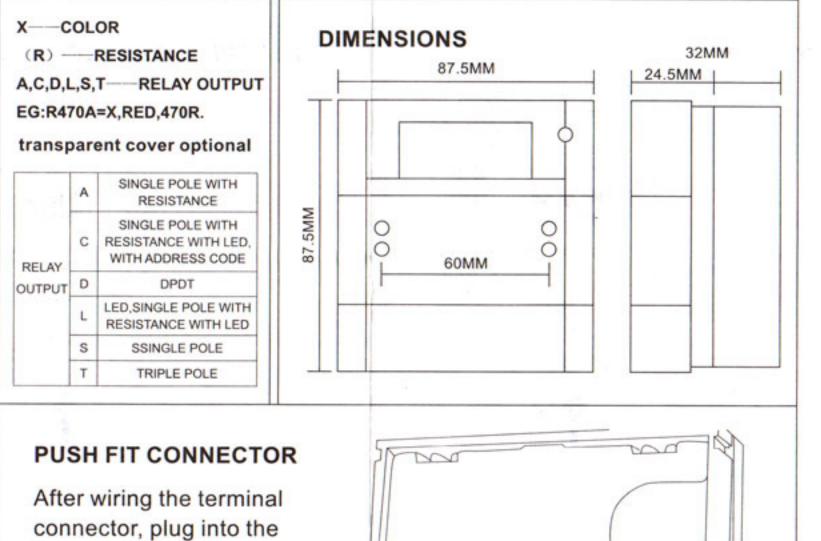

1 2 3 4

5678

appropriate position, see

connection details(left).

