Chapter 1 Software IInstruction

1..1 Summarry

This is a Central Control Software with powerful function and Distributed Architecture,integrate many windows,users,languages,bidirectional Talk,video conference,Classic of electronic map,alarm center,be compatible with Other extended products and single directly connected devices surveillance system as one.

This software is only for connecting different devices (DVR,DVS etc...),the manual only descrip the software,for specific equipment features,pls refer to related product manuals.

1..2 Feattures

1.2..1 User and Authoriity management.

Support N level organization management,user management and authority setup.

1.2..2 Data interface ttechnology adoptted..

All datas adopt data interface technology,so it can support every database sizes very Flexibility,such as SQL,MYSQL,XML data and so on.

1.2..3 Supportt EXCEL edit to add device.

The platform support the user adopt Excel to add and edit devices,it's very convenience for user to maintain quantities of devices,improve system's useability and greatly reduce many works for maintenance

1.2..4 IInttellligentt Video Transport Protocol.

Intelligent Video Transport Protocol can do Maximize the use of network bandwidth,especially on the condition of Front-end network bandwidth limited,when to assure system based on high quality Image in very low network bandwidth,it can work well.

1.2..5 Scallable distriibutted network archiitecture.

Support multi servers running Coordinated,Intelligent load balancing,Flexibility to add server and Enhance the system capacity Effectively on the condition of Integrity assurance.

1.2..6 Perfect video moniitorriing..

While real time monitoring,system support alarm,recording,auto monitoring record,playback and so on,it can exactly control each channel recording status.

1.2..7 Dynamic regullatiion decodiing buffer.

Flexibility in adjusting the Fluency/real-time of video images when real time monitoring which can meet different users need.

1.2..8 Adopting shelf technology

Modular Development and flexibly assembled applications.

1.2..9 Centtral management..

Centralized management of data throughout the system and Forwarding of data to provide the perfect multi-user real-time monitoring program.Remote users can real time monitor,record and playback through network.

1.2..10 Easy operattion

In access control,Users can easily control and set each monitor point through the system,it also could integrates E-map.

1.2..11 High iinttegrration levell

The system integrates other related informations,like Alarm and Voice etc...

1.2..12 High relliabilliity

The system designs a special Fault tolerance measures to assure data Integrity and system runing dependability.

1.2..13 Good scalabilitty

The system designs for Service,has good Scalability and Adaptability to maximumly protect user investment.

1.2..14 Support Network management and lload ballanciing..

1.2..15 Support multii devices upgrade volumelly viia network.

1.2..16 Support Userr DIIY iintterface and mulltti languages.

1.2..17 Support 4 channells reall tiime playback..

1.2..18 Support connectiing multii deviices and view many videos(rreall tiime moniitoriing and playback)

1.2..19 XML datta storage

Chapter 2 IInstalllation iinstruction

2..1 Enviromentt requestt of rrunning

2.1..1 Harrdware..

CPU P4/2.0G

Graphics must support hardware scaling(such as ATI,TNT2 and PRO,but suggest ATI9800 or above,dual channels,Memory(over 128M)/128bit

Note: it needs good configuration for memory,graphics and CPU If many screens need to be decompressioned.

Netcard:100/1000M

2.1..2 Softwarre.

This CMS can run under Vista,Winxp,Win2000,Win2003 and Win2007,it's not suggestion for windows 98.


Pls close all Antivirus Software and firewalk so that it can write running program correctly and completely in the control center before installing the software,or it will not search any devices.


2..2 Insttallllattion step

2.2..1 Find ""CMS_ChnEng_V1.0.0.6.T.20090315.Exe" in the CD and rrun iit like bellow pic.




2.2..2 Cliick "Next"",then go the bellow pic..

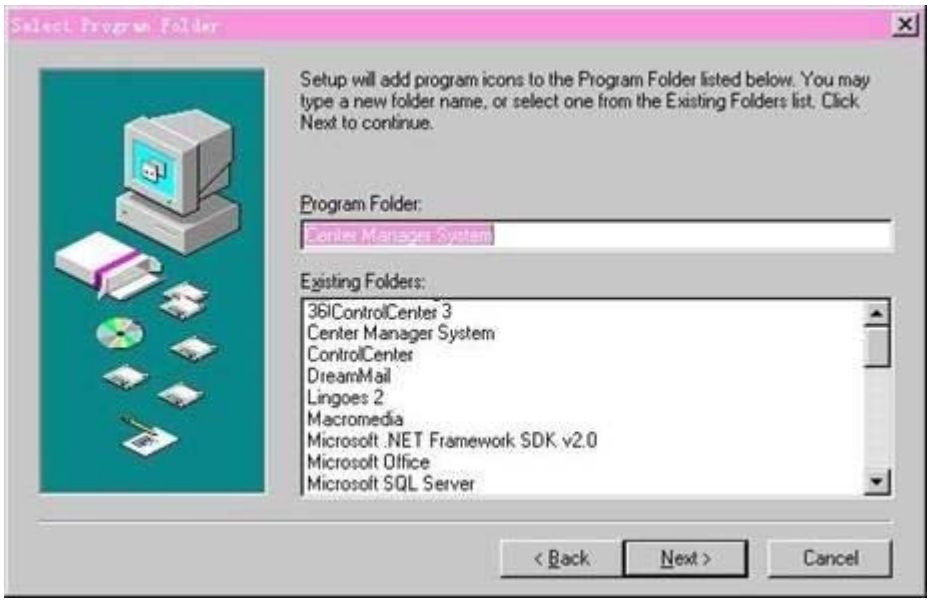

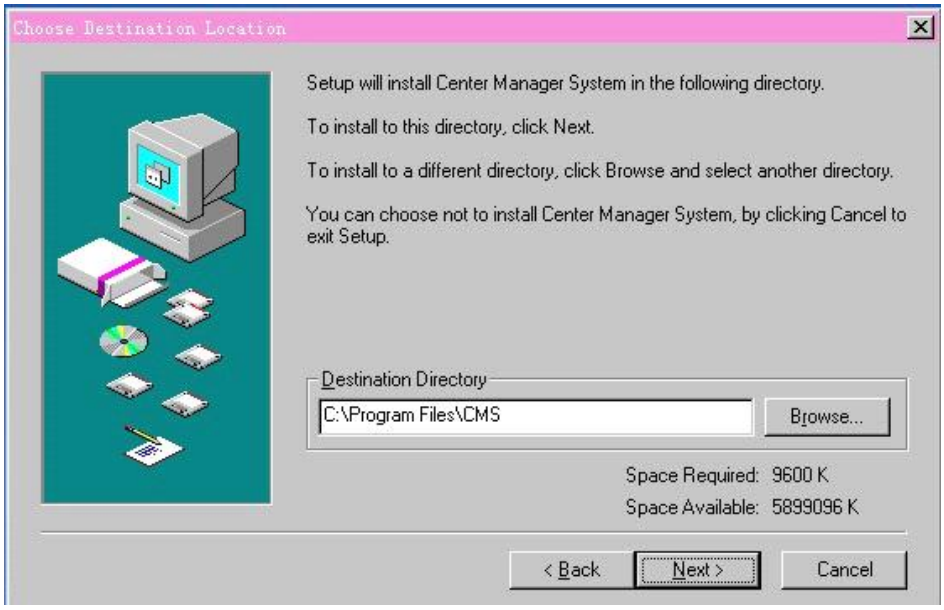

2.2..3 Cllick ""Brrowser" to select setup patth(default path "C:\Prrogram Fiilles"),then click "Next"" to sellectt Start Menu follder lliike below pic..

2.2.4 Cllick "Next"" to starrtt setup andend setup liike below pic..

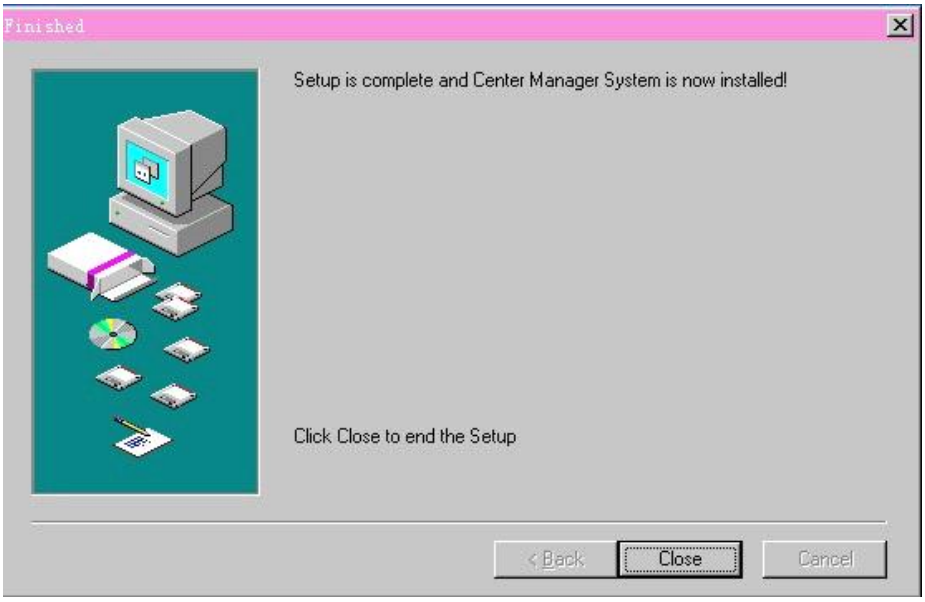




2.2..5 Cliick "Finish" to end the settup,att the ttime ittwiill come up tthis icon in the deskttop
Pls folllow Chapter 3,4,,5 iinstrructions tto operrate this software after finish insttallattion.

Chapter 3 IIntroduction of basiic functiions

3..1 CMS Operratiion Maiin Menu

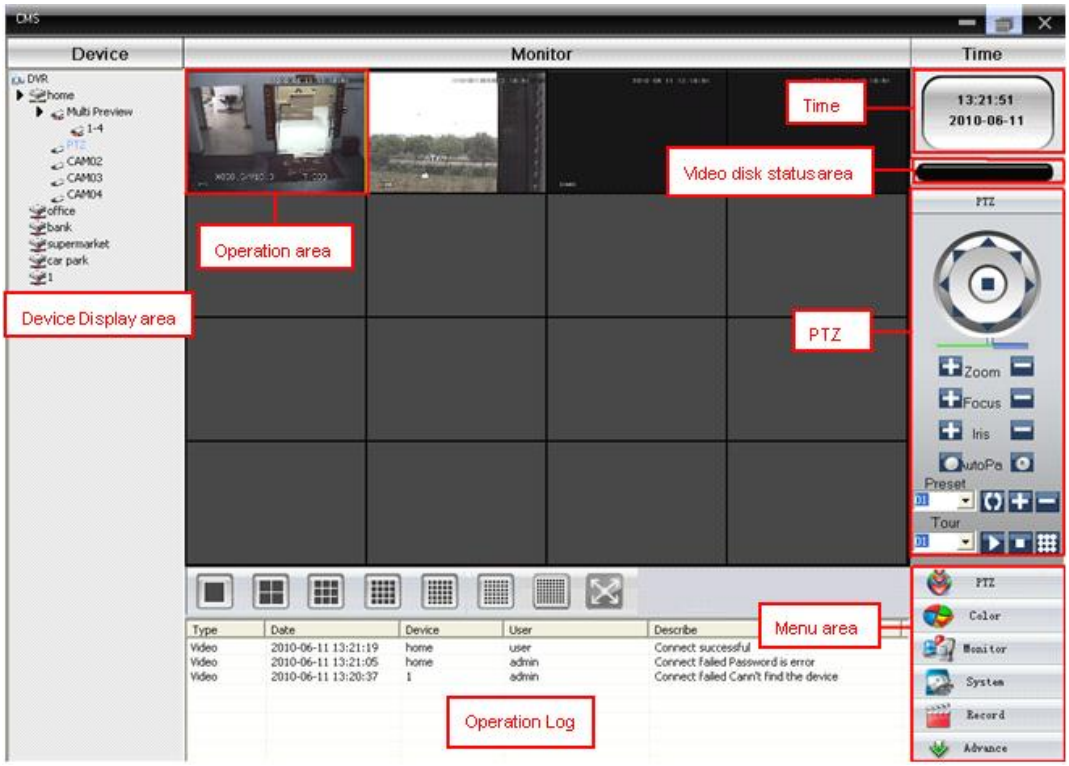

3.1..1 Device display arrea

In this area,you can preview live screens by device and super account administrator setting,click device name or channel group to change channes.

3.1..2 Operattion area

You can preview live screens ,and setup parameters when system configuration and video searching in this area.

3.1..3 Time

3.1..4 Video diisk stattus area

It can display the rest disk spaces where video files store

3.1..5 PTZ

3.1..6 Operattion log

It will display any operation informations when setup and operating.

3.1..7 Menu Area

Users could set single menu and sub-menu in this area,select relevant menus to opearte video surveillance system in the control center.

Diiagrram 1 Menu Configurattion

No..	First Menu	Second Menu	Thiird Menu	Functtion & IInstruction	Operrating right
1	Preview			Click preview button "Monitor" to choose a preview of the screen,touring & switching among all channels and snapshot pictures of the screen. Shup down/open preview menu	Admin/User
2	PTZ			Controling the speed cameras to go up,down,left,right and stop by operating panel,adjusting speed,zoom,focus,iris and auto pan,	Admin/User


3	Color			Set brightness,contrast,saturation and hue for video screen	Admin/User
4	System	Device manager	Add zone	Add zone for all devices	Admin/User
			Add device	Add video surveillance devices	Admin/User
5			Modify	Modify device name,ip address,user name and password	Admin/User
6			Delete	Delete video surveillance devices	Admin/User
7		Local Config	Base config	Select disk,disk list and logs maintenance	Admin/User
8			Alarm setting	Enable audio activated by alarm	Admin/User
9		Account	Group	Add and delete users' operating rights	Admin
10			User	Add,delete and manage users: Set user name,password and operating rights of menu	Admin
11		Local Log		Search alarm log and operation log in set time area.	Admin/User
12	Record		Playback	Search record file and playback	Admin/User
13			Record Plan	Set record time for every day	Admin/User
14	Advance	Decoder		Set DVR and decoder	Admin/User
15		Map		Using this map,it can visually show every cameras location and find current monitoring page directly	Admin/User

Chapter 4 Monitor

In the menu area, click "Monitor", it will turn to preview screen.
Monitor functions: Preview, PTZ and video specification configuration.

4..1 Previiew

Diagram 2 Functions and instructions of preview

No.	Button	Meanings
1		click it to preview full screen for every channel
2		click it to preview 4 screens
3		click it to preview 9 screens
4		click it to preview 16 screens
5		click it to preview 25 screens
6		click it to preview 36 screens
7		click to to preview 64 screens
7		click it to enter full screen interface

4..2 Riight-cllick Menu

At operating area, user can do below operation by right-click:



Close window: close the current screen

Close all window: close all the current screens

Audio: click it and hear the voices from preset screens

Local record: click it to record at current channel and save the record at the relevant disk.

Snapshot: Capture pictures from current channel at any time and save it to relevant disk.


Device config: click it and go to device configuration interface.

4..3 PTZ Contrrol



When speed cameras are connected with DVR, user can control it at this center, turn up, down, left and right, stop running, adjust turning speed, zoom, focus and iris, preset and tour configuration. When user enable touring function, the

speed cameras will tour according to preset.

Function:

No.	Button	Meanings
1		▲ means "turn", ■ means "stop turning"
2		Drag this pole to adjust speed rate
3		Click + to zoom in; Click − to zoom out
4		Click + to focus in; Click − to focus out
5		Click + to iris it; Click − to iris out
6		
7		Set a location for the preset, calls the preset points, PTZ automatically turns to the setting position, add, delete and config preset point
8		Multiple preset points connected tour lines, call touring between points, the PTZ run around on the line

4..4 Color


No.	Button	Meanings
1		Brightness
2		Contrast
3		Saturation
4		Hue

Picture 4-3 Color


Note:: Click  to resume Initial values

Chapter 5 System


5..1 Device manager



5.1..1 Cliick tto add zone, see below:

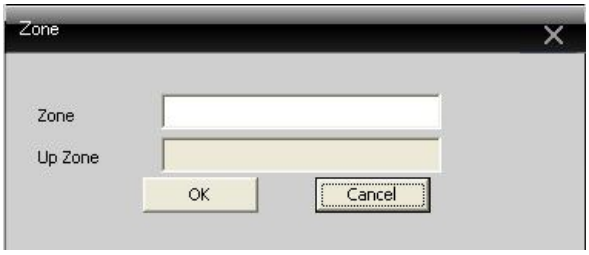

5.1..2 Cliick  **to add device,,see bellow pictture:**

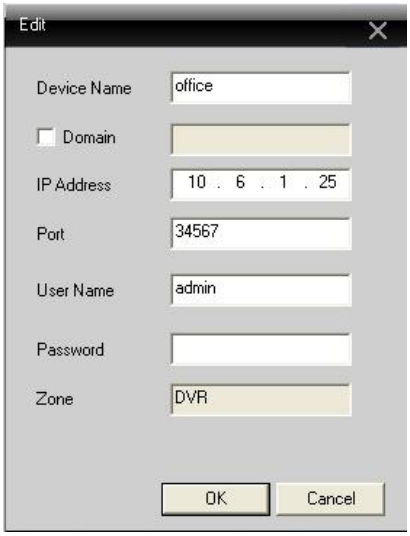

Device Name: Device name

Domain: Domain name by external network such as xxxx.3322.org; xxxx.dyndns.org; xxxx.oray.org etc...

IP Address: IP address

Port: TCP port

User Name: User name

Password: Password

Click "OK" after you have done above parameters,see below picture,you could only doubleclick to open this device.



Note: Choose only one of Domain name and IP address

5.1..3 Cliick  **to modify device,,see bellow pictture:**



After finishing all the modifications,click "OK"

5.1..4 Delette device


Choose the devices which you want to delete,then click .

Note: Please make sure the device is disconnected before modifying and deleteing it.

5..2 LocallDeviice

5.2.1 Base Conffig

See below picture:

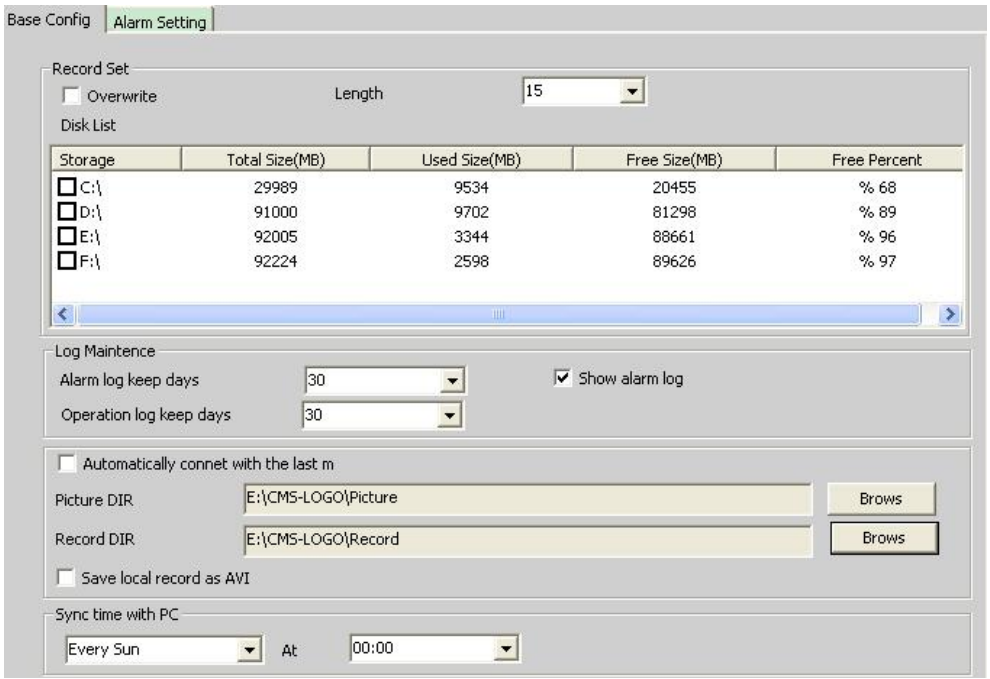



Overwrite: Click it,then it will cover the old records when HDD is full

Length: Time length for 1 record file

Disk List: C,D,E,F

Log Maintence: Alarm and Operation log keep days

Picture DIR: Picture storage location by snapshot


Record DIR: Record storage location by local recording

Sync time with PC: Adjusting device and PC in order to make both at the same time

Version Info: CMS's vertion(video,net,decoder,playback and device config)

Language: Choose language for CMS

5.2..2 Alarm settting

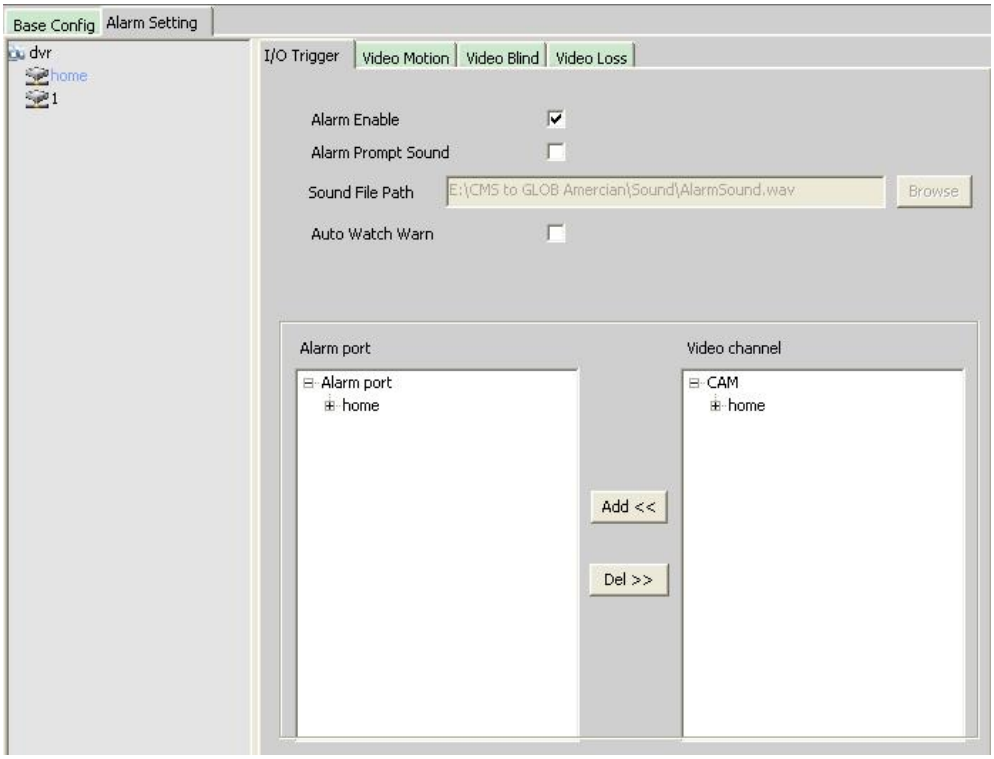


Device list: Choose 1 device to set alarms

Alarm Enable: Click it to make sure all alarm functions available

Alarm Prompt Sound: Select any alarm prompt sound which you like


Sound File Path: Browse and choose prompt sound

Auto Watch Warn: Choose it to add following channels by alarm activated

Note: Please go to choose alarm type first 

5..3 Remote Conffig


Select a device first,then set its configurations,see below picture:

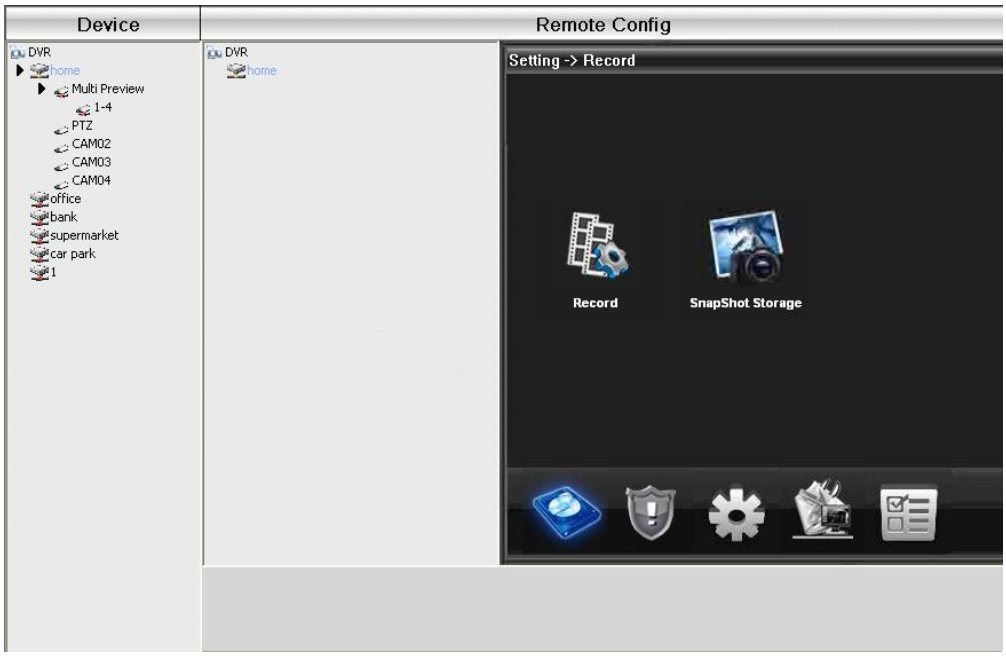


5.3..1 Record: Click  to go into record interface



Set record length,period,type etc...see below picture:

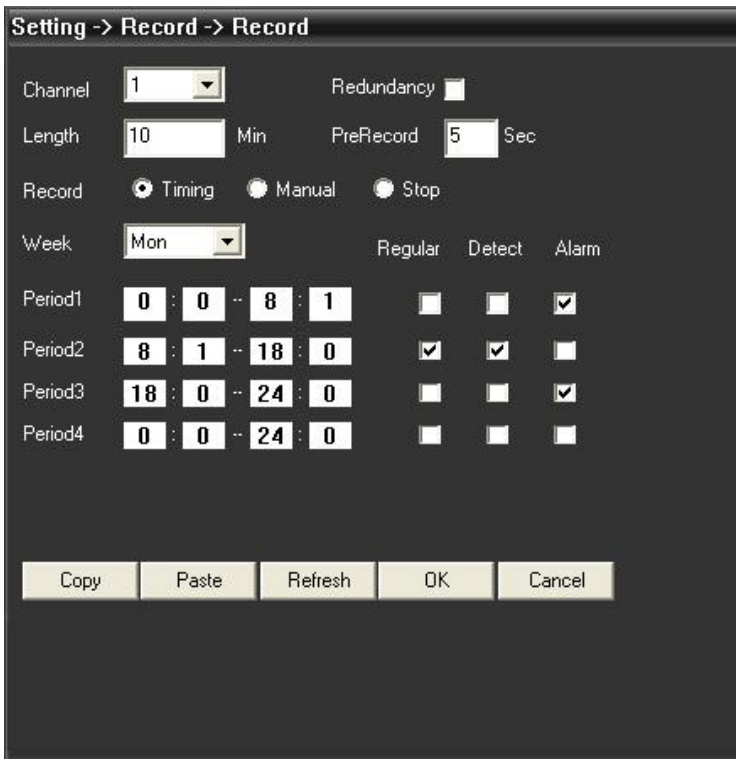


Snapshot Sttorage: Set presnapshot,snapshot type and period,see below picture:

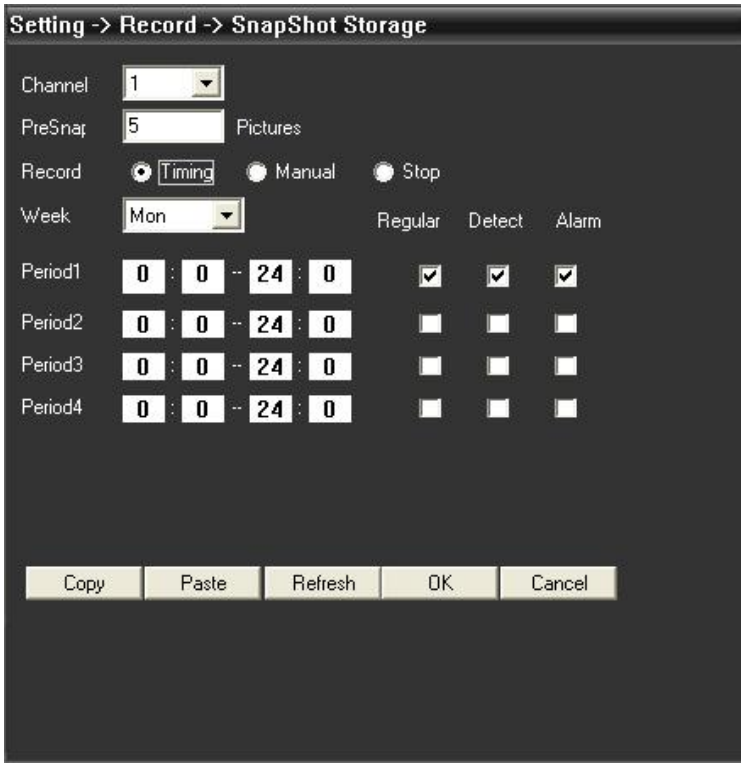

5.3..2 Alarm:: Click  to go into alarm configuration,see below picture.



Alarm activation configuration(motion detect,video blind,video loss and alarm in),see below picture.

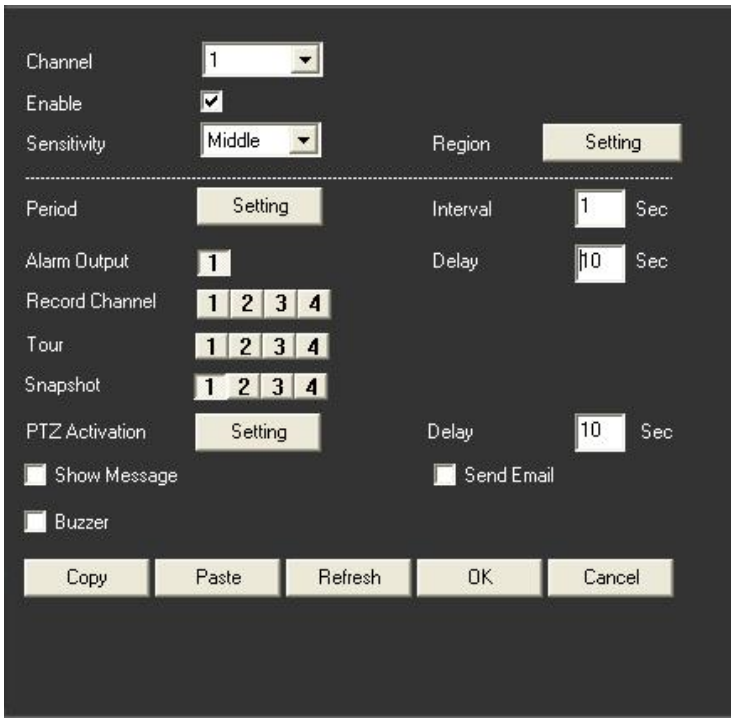


5.3.3 System


Click  to go into system set interface,see below picture.




Generral: Set system time, language, video standard, DVR No., auto logout and so on, see below picture.

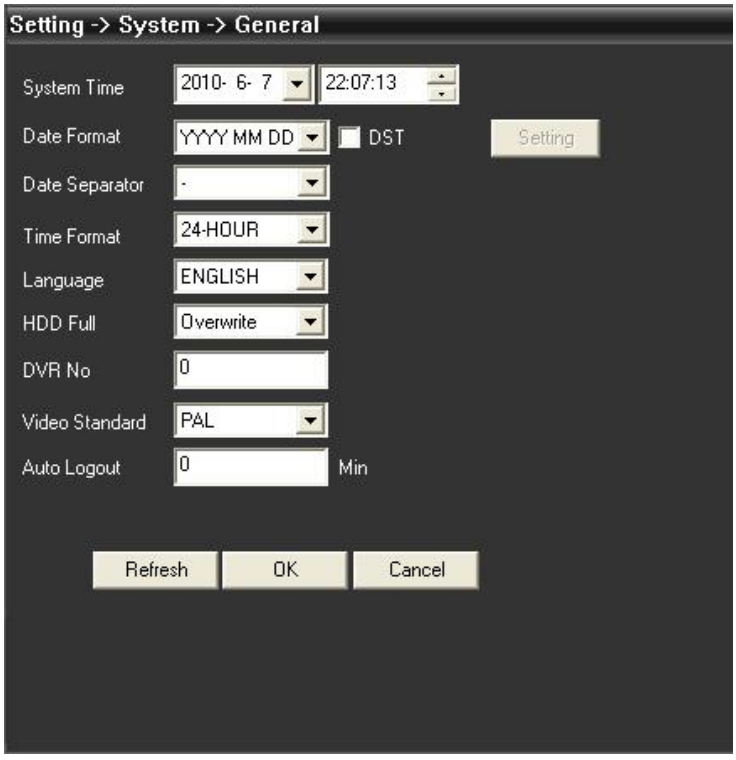


Encode: Set dvr specifications of resolution, FPS, video quality etc...see below picture.

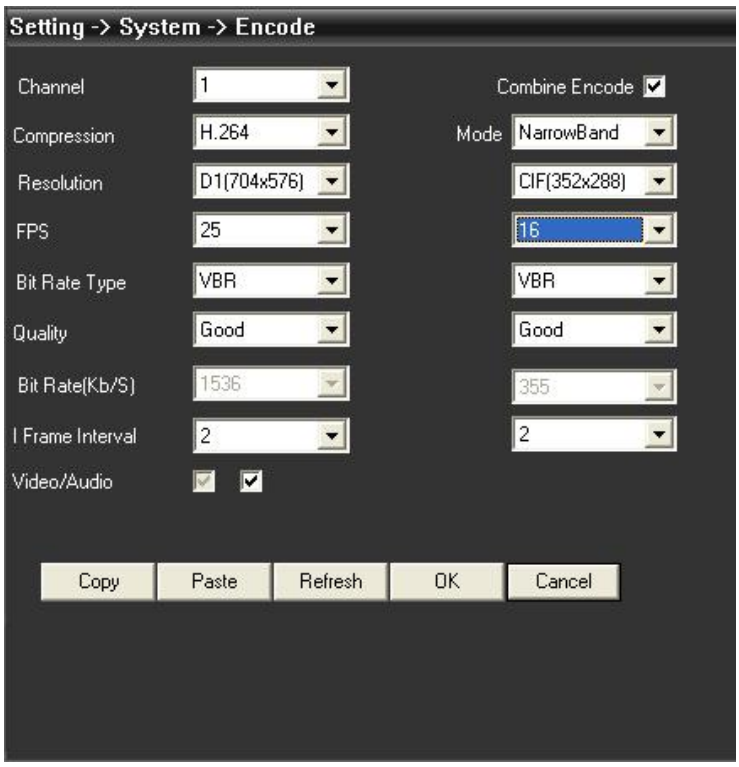


Nettworrk: Set IP address,port,DNS etc...in order to remote monitor by network and mobile,see below picture:

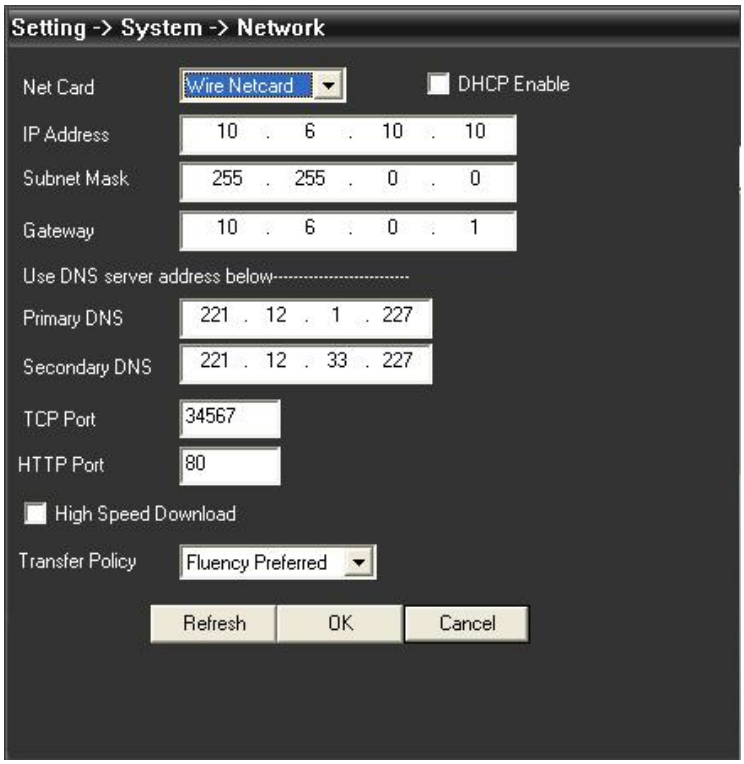


NettServiice: Set IP filter,DDNS,Email etc...see below picture

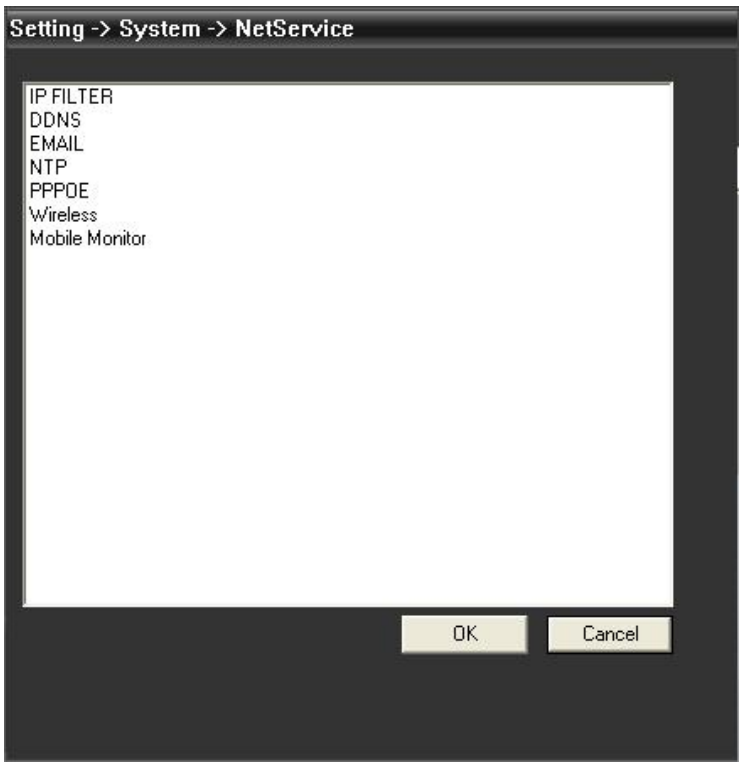


CAM Name: Add or modify camera name by your need,see below picture

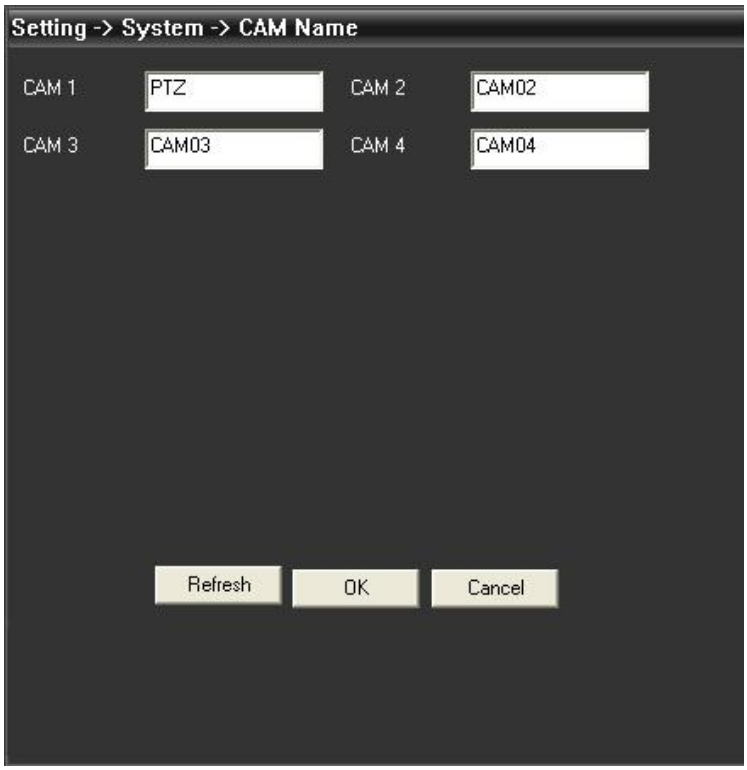

PTZ confiig: Set PTZ parameters to make sure the same as speed cameras.

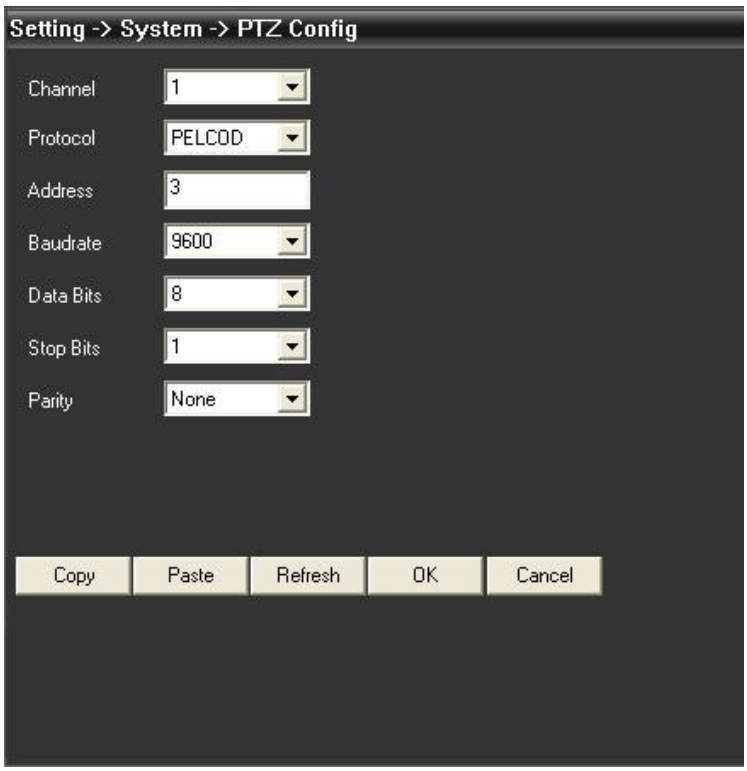

RS232: Set RS232 port configurations ,see below picture.

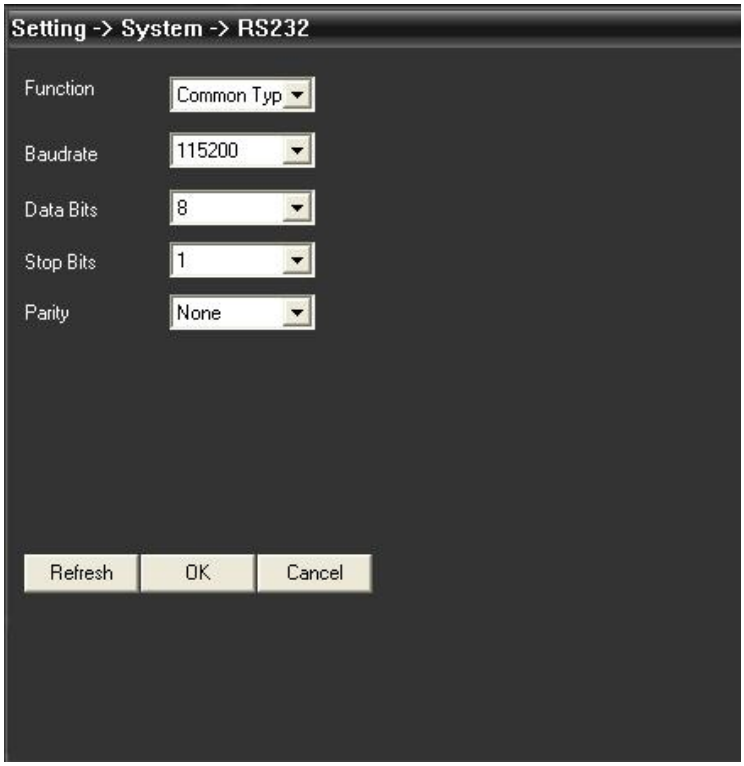


Advanced:: Click  to go into advanced interface,see below picture.



HDD manage


Account:: Modify User,group,password,add user,group etc...see below picture:

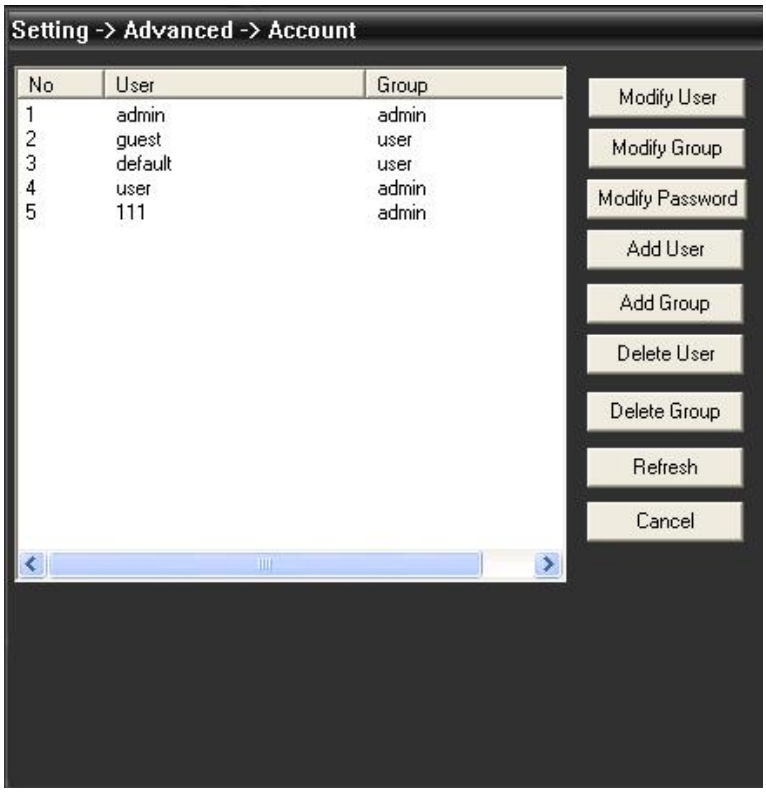

AutoMaintain: Set Auto-Reboot time and files management,see below picture



Deffaullt:: Restore to factory settings

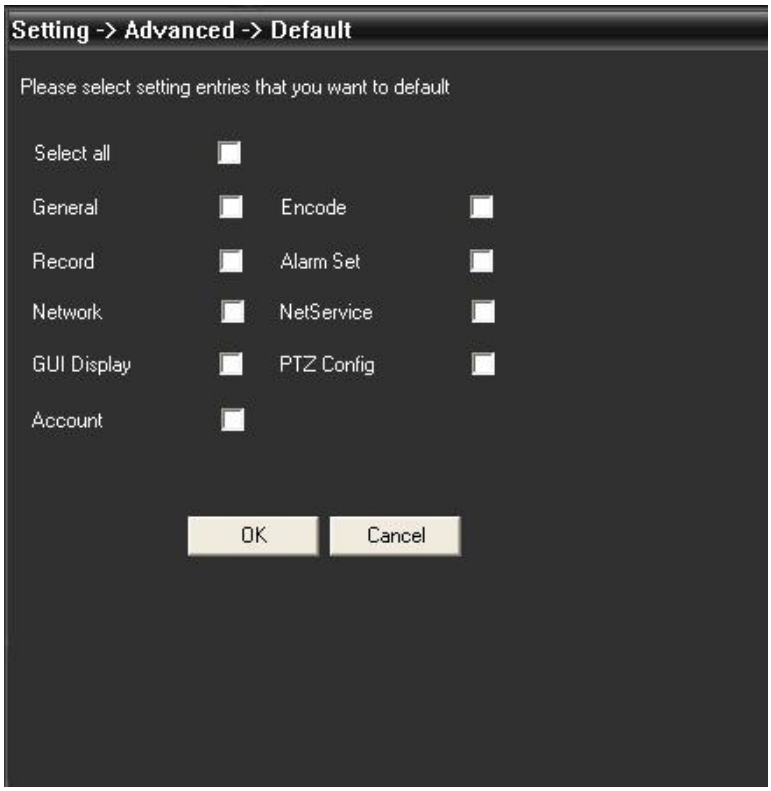

Info. Click  to go into system info interface,see below picture:




In system info,there are HDD info,LOG and Version.

Chapter 6 Account


6..1 Group

Add&delete group and set group right,see below picture:

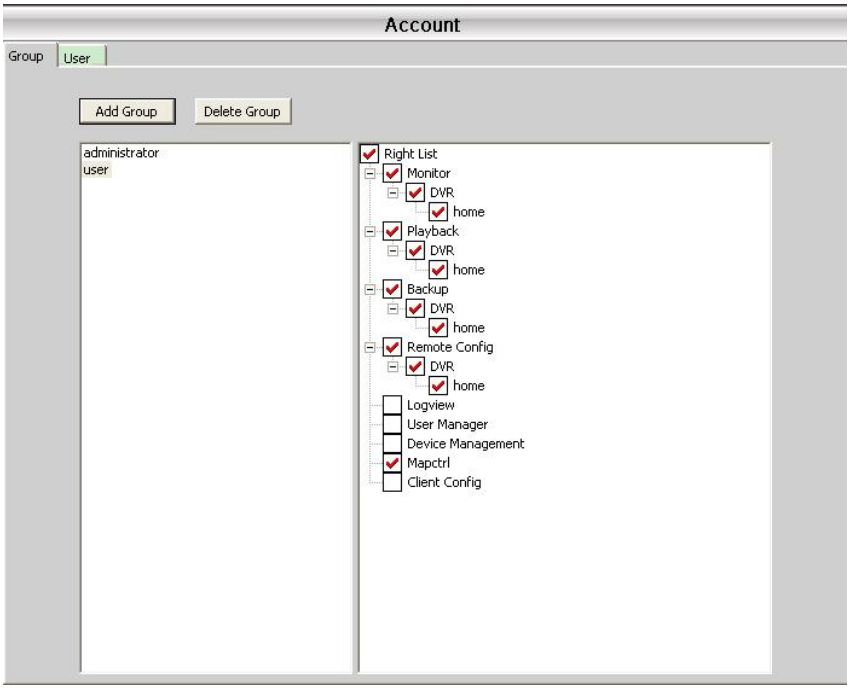


6..2 User

Add&delete user and modify password

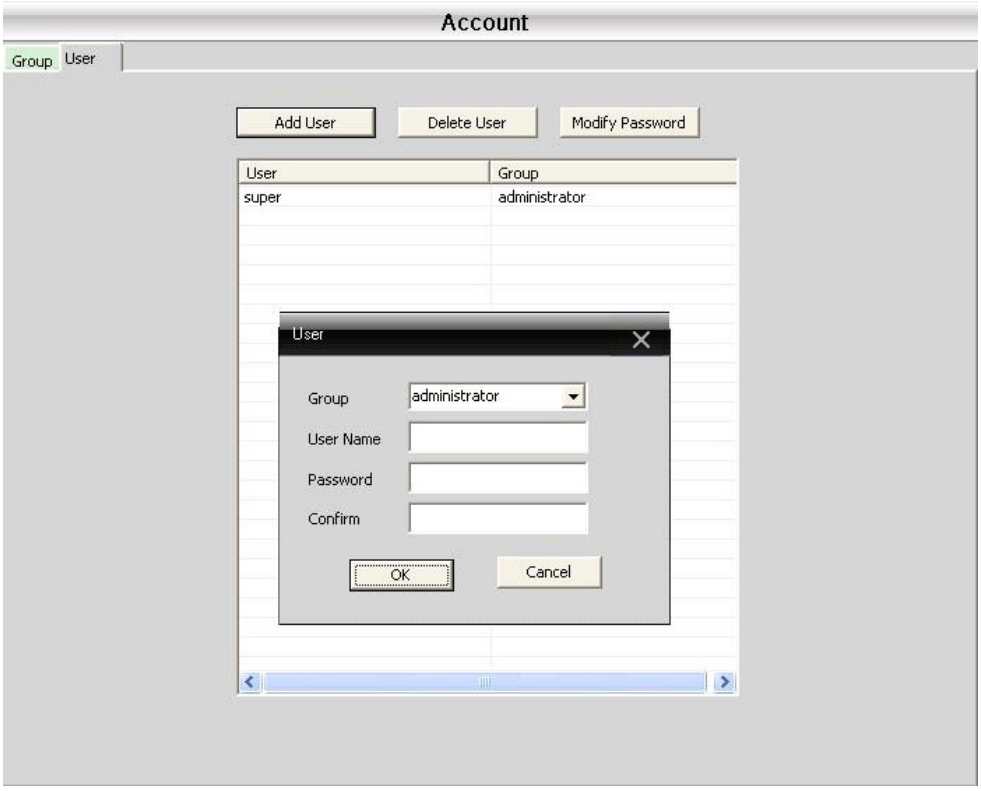

Chapter 7 Locall Log

User could search menu operation log,alarm log and other logs by time,see below picture.

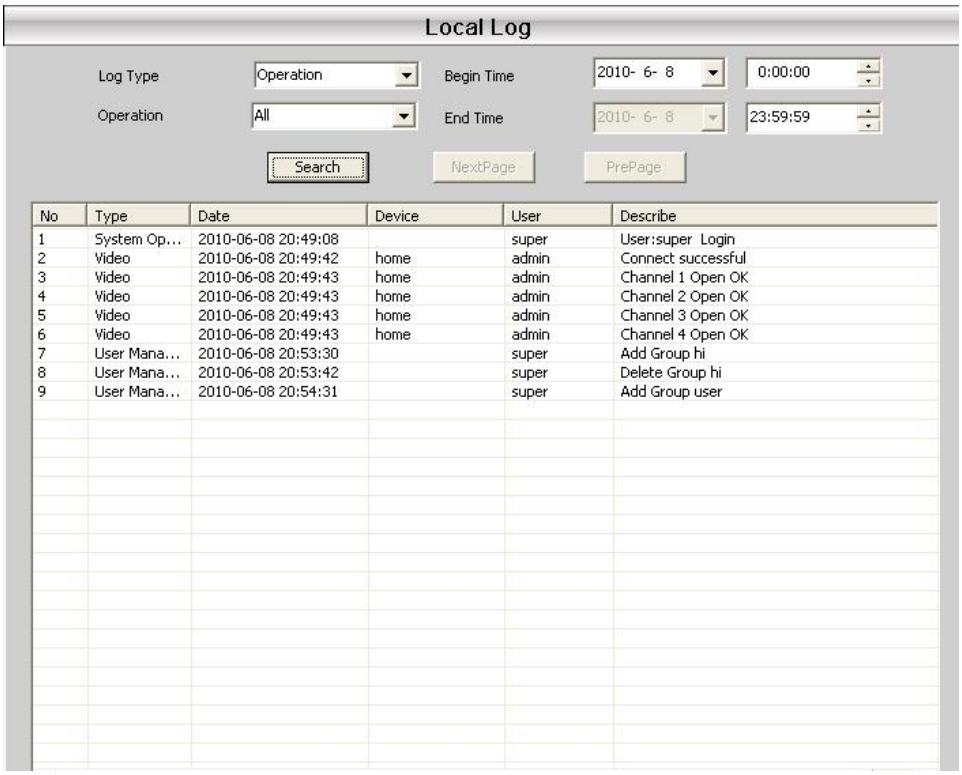

Chapter 8 Record


8..1 Playback

There are 2 playback modes---Remote playback and Local playback.

Remote playback: Playback at Device-side.

Local playback: Playback at Client-side.

User could playback record files of any times,max playback channels are 4.

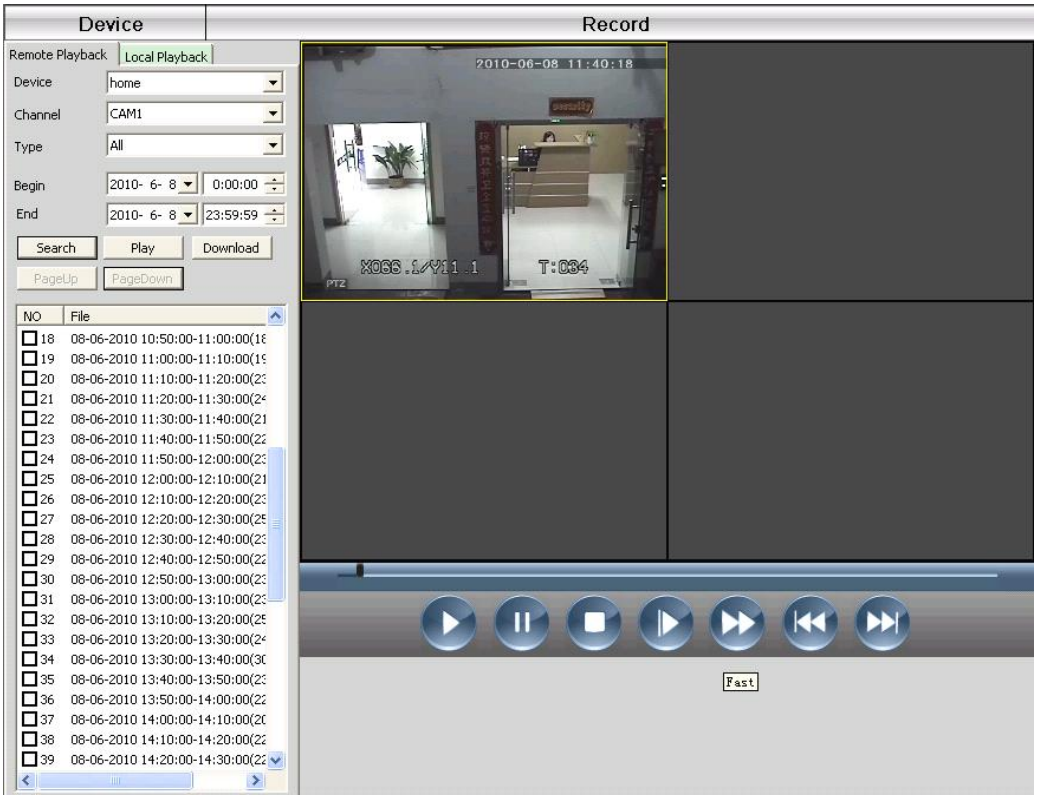

Button instructtion


No.	Button	Meanings
1		Play
2		Pause
3		Stop
4		Slow play
5		Fast play
6		Last frame
7		Next frame

8..2 Downlaod & Backup


User could playback record files at set time and channels,select record fines,click "Download/Backup" and select "save directory".

Note:: Remote playback----Download


Local playback---Backup

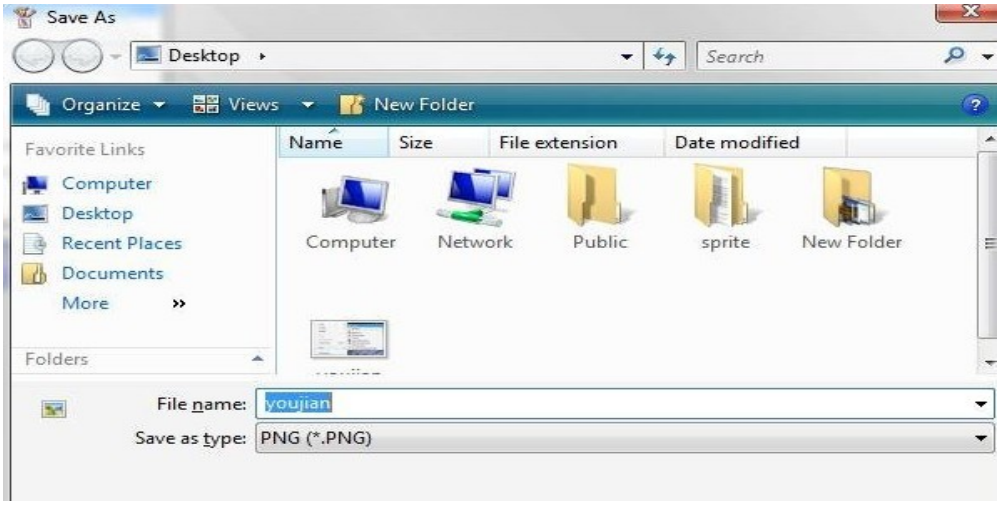

8..3 Recorrd pllan:: Set your record plan on any clocks and days,see below picture:

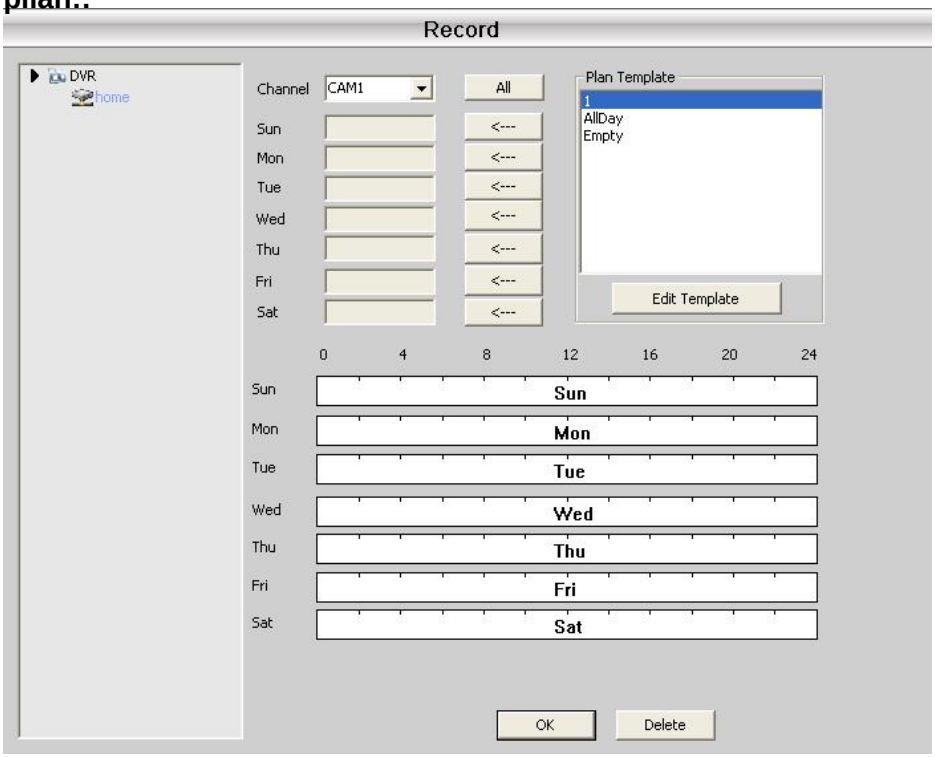


Edit Template,see below picture:

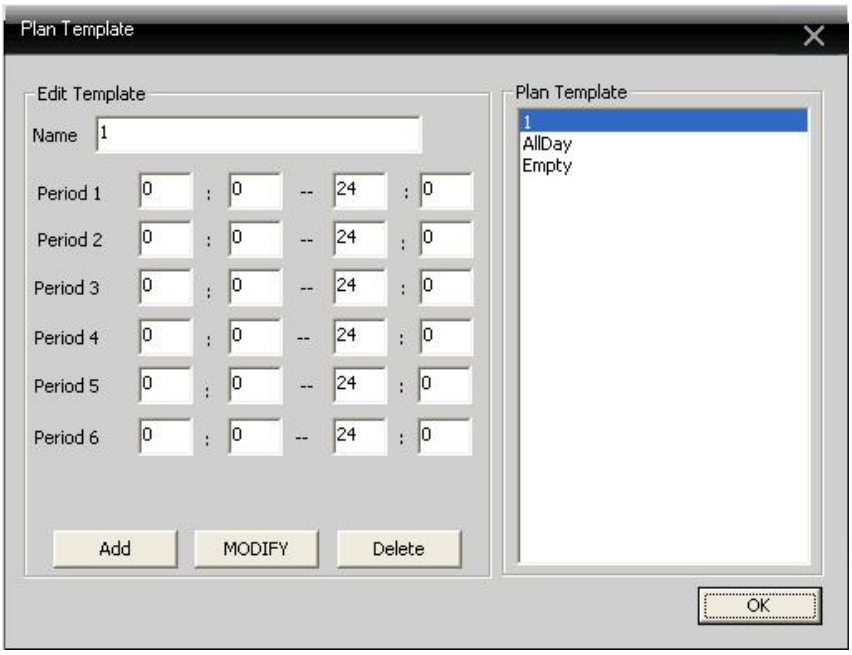

After set name,then click "add" and "OK"

Choose "channel" first,then go to set record time from Monday to Sunday.

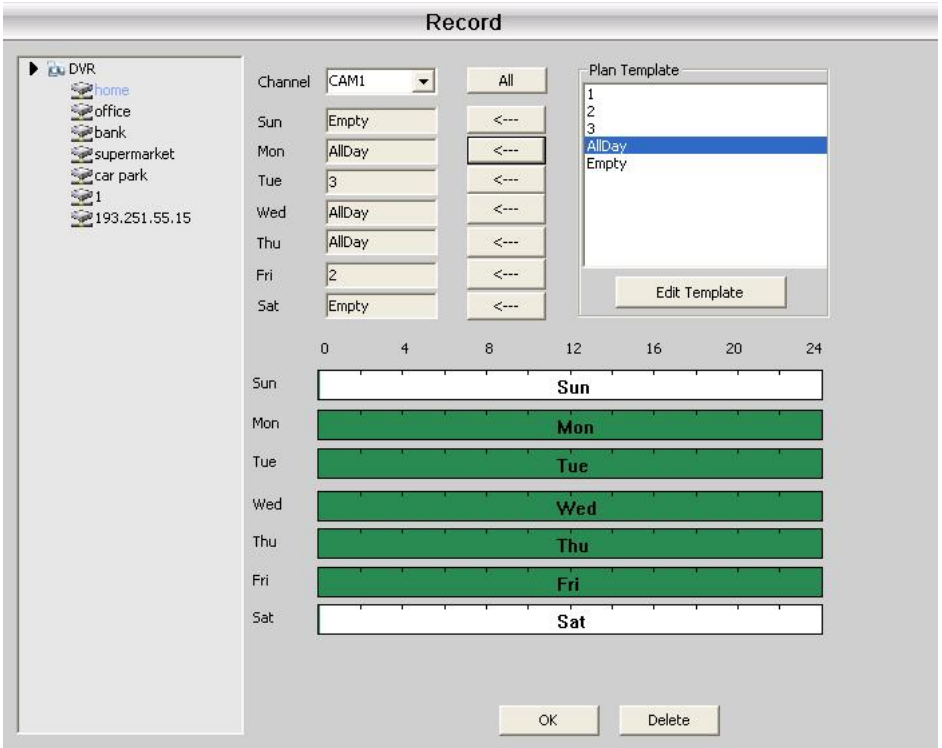

Note: After set record plan,If it need to record,please make sure the below 3 points:

1.Choose disk for recording at Local config.

2. Make sure the device is connected to network.


3. Make sure local computer is always open.

Chapter 9 Advanced

It contain two options---Decoder and Map.


9..1 Decoderr

It can manage and config remote decoder very easy,see below picture:

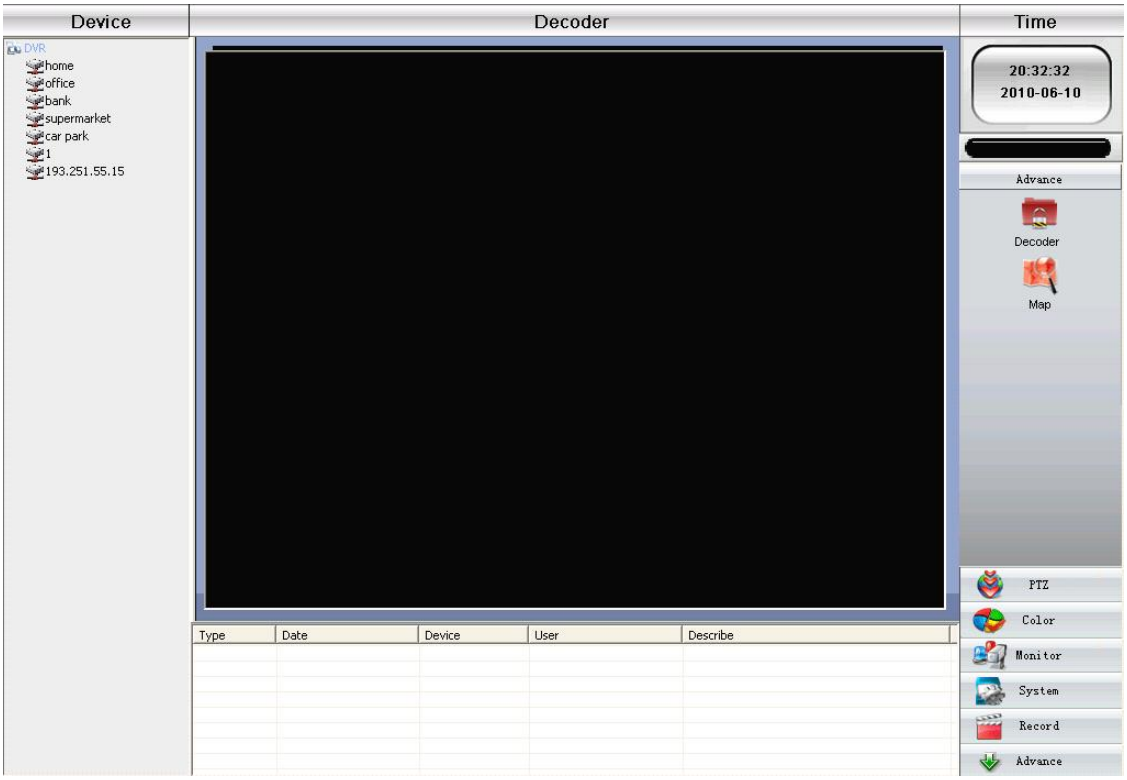

9.1.1 Add decoder

Right-click to add decoder,see below picture:

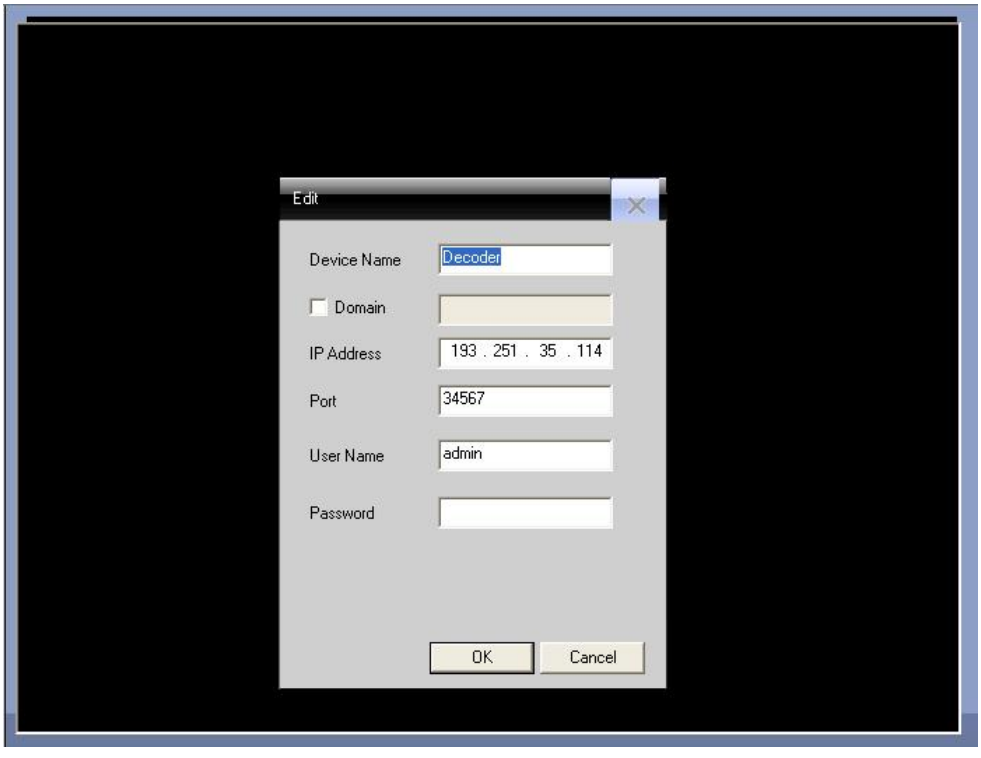

Device Name: Name of decoder,it's set by yourself

Domain: Domain name of decoder


IP address: IP address of decoder

Port: TCP port,default is 34567

User Name: Login name of decoder,default is admin


Password: Password of decoder

After you add decoder successfully,it will come out a "decoder" ico in this interface,right-click this ico to edit,delete and set attribute.

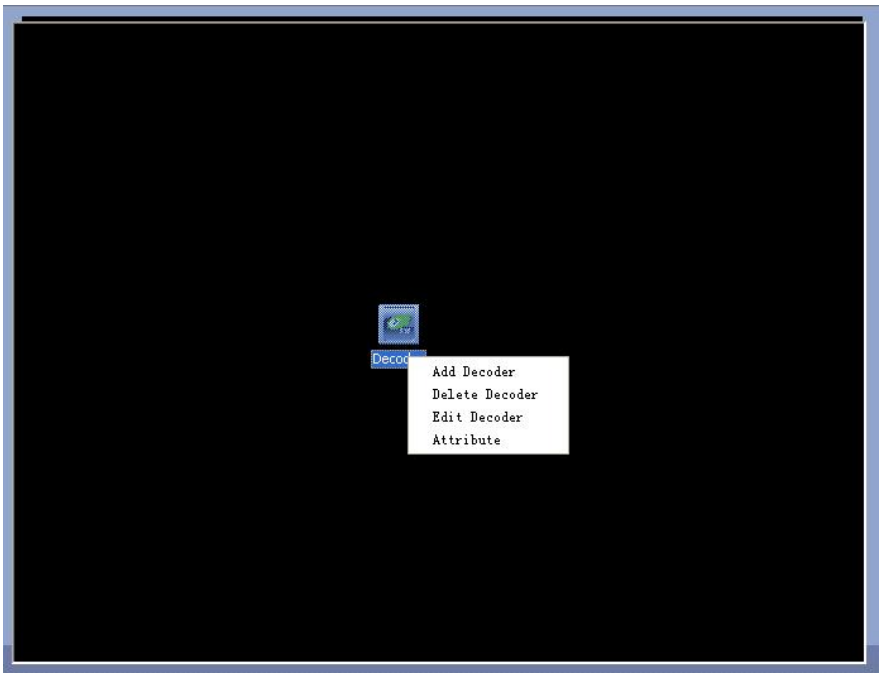


9.1.2 Edit

Right-click decoder ico to "edit decoder",see below pictures:

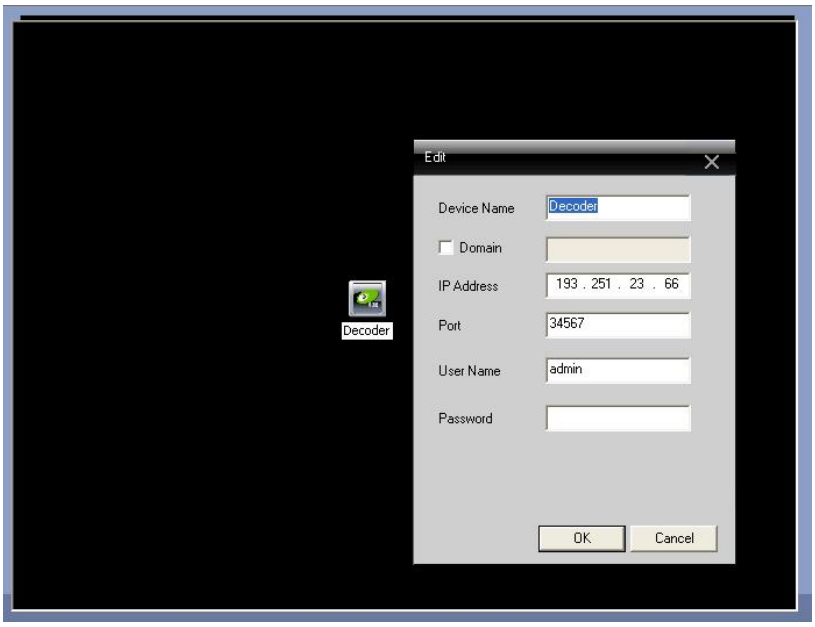

9.1.3 Sett decoder Atttribute

Right-click to click "Attribute",see below picture:

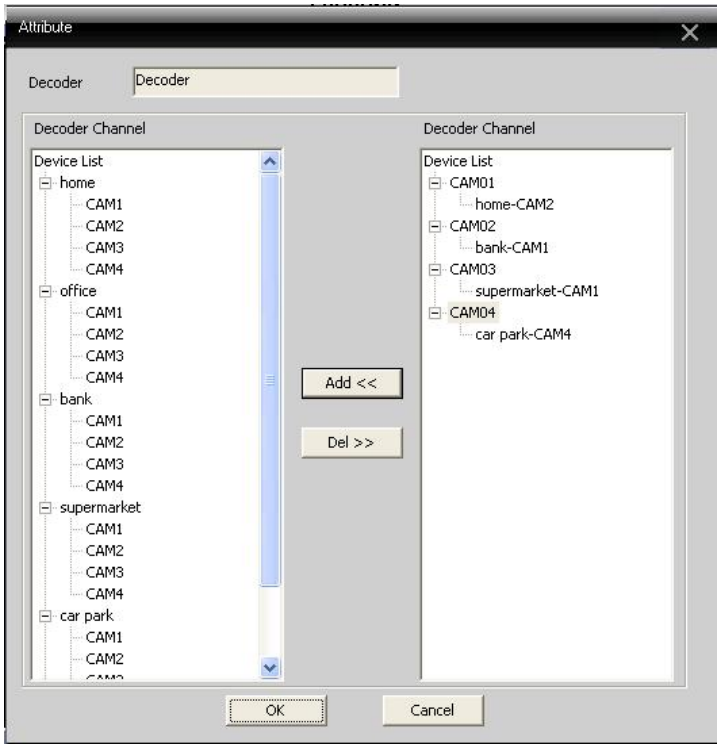

In the device list of left side,select 1 camera,then select 1 camera of right side,at last click "Add" in the center,for example:

See above picture,

Decoder CAM01 decode output for "home-CAM2"

Decoder CAM02 decode output for "bank-CAM1"

Decoder CAM03 decode output for "supermarket-CAM1"


Decoder CAM04 decoder output for "car park-CAM4"

Delete decoder


Right-click to delete decoder

9..2


E-MAP is a plan for simulating live screen,user can use it to add & delete cameras and set e-map alarm E-MAP activation,see below picture:

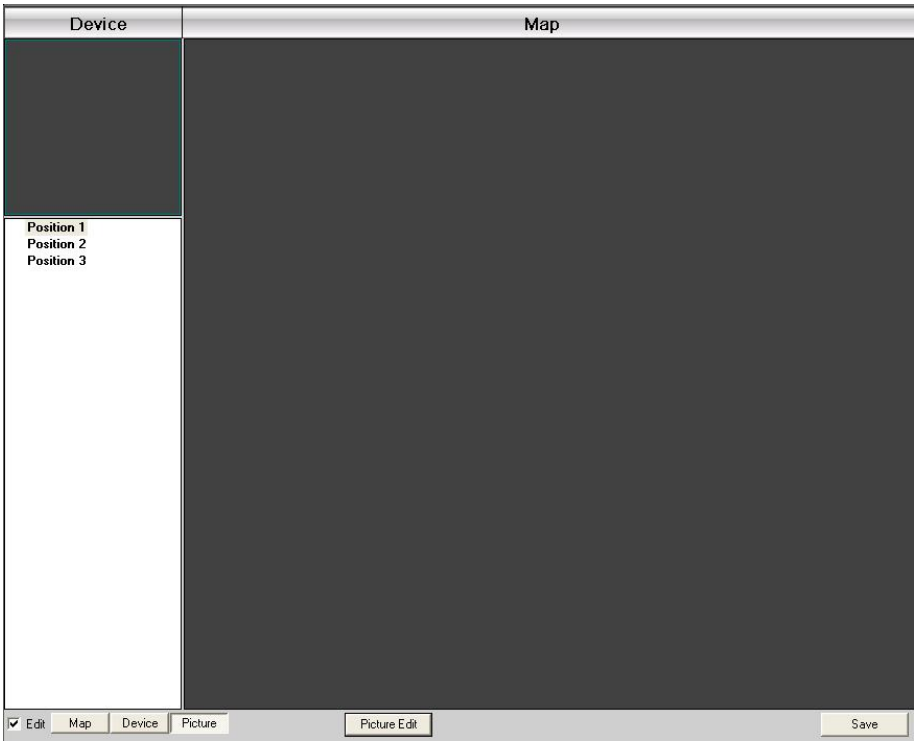

1.Click "Edit" first at the left bottom,then click "Picture Eidt",see below picture:

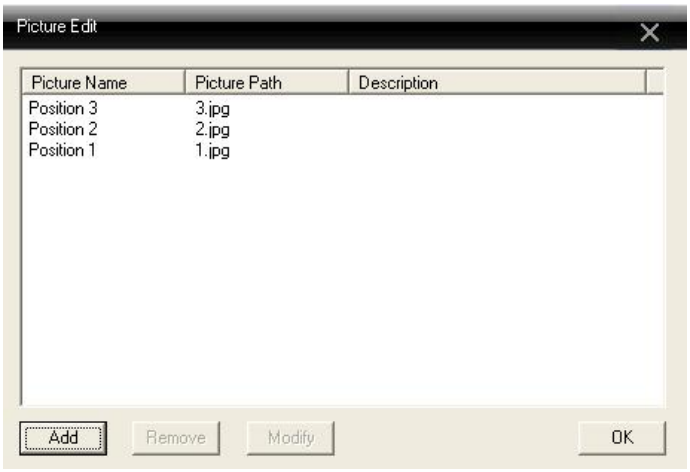


2.Click "Add" to add picture,see below picture:

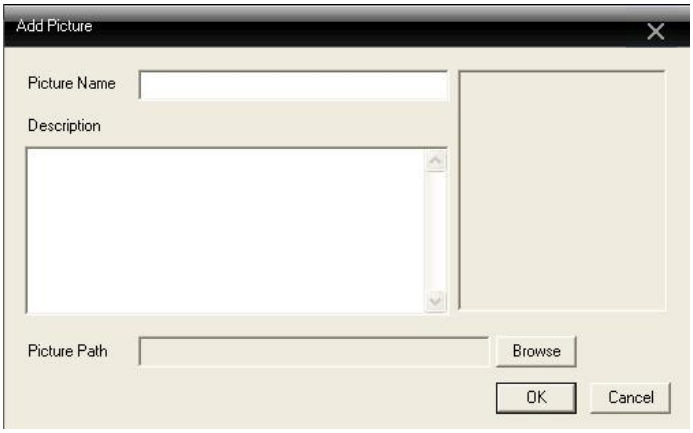

3.After set picture name,description,picture path,then click "OK" back to main interface.

Click "Picture" and drag 1 picture to the right side,see below picture:

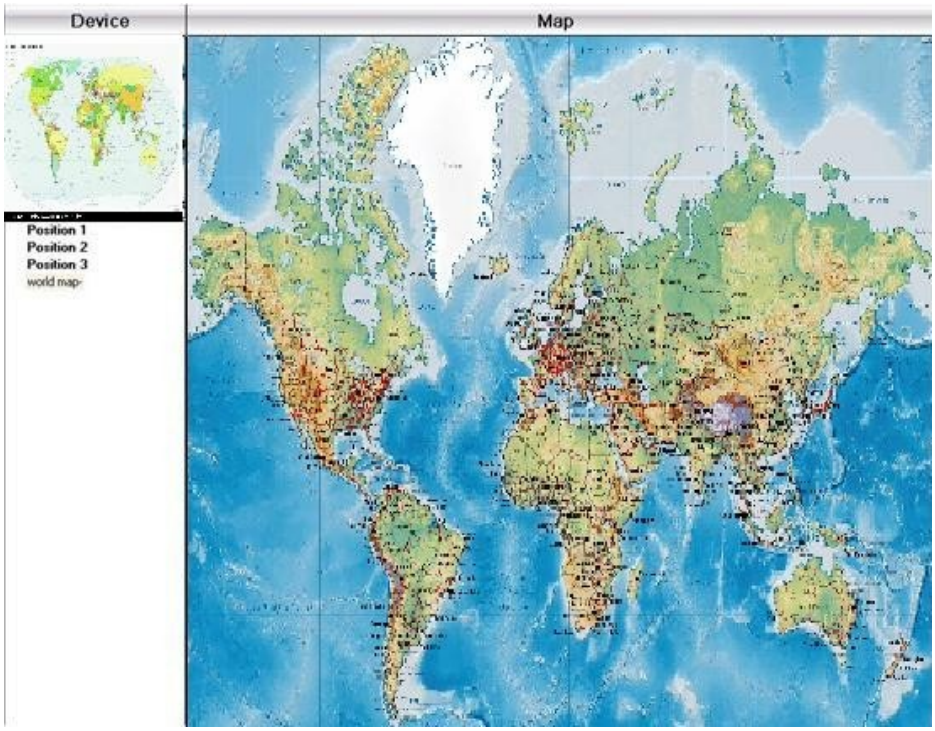

4.Click "Device" to drag device's channel to the map,then the channel name will appear at the map,double-click it to name and describe it.

Appendiix A Abbreviations

Abbreviatiion	Fulll name
CMS	center manager system
DVS	Digital Video System
PTZ	Pan/Tilt/Zoom
TCP/IP	Transmission Control Protocol / Internet Protocol

Appendix B Maiin parameters

Video Compression			H.264 main profile
Audio Compression			G711A
Video Resolution			D1/HD1/CIF/QCIF
Display resolution	Resolution	NTSC	704 x 480
		PAL	704×576
	Rate	NTSC	30FPS
		PAL	25FPS
Frame rate			30/25(NTSC/PAL) F/S
Video input			BNC input
Audio input			RCA input
Type of compressed code			Combine code
Rate of compressed code			32kbps ~ 2048kbps(adjustable)
Network Procotol			TCP/IP,static IP , DHCP , PPPoE
Net Interface			10/100M RJ45
PTZ procotol			Pelco-P/ Pelco-D/ Minking/ Linlin/ Neon/ Star/ Vido etc...
Remote Monitor			IE browse,CMS and Mobile