

Assembly instructions

Assembly packing list

Width 600mm

Screw M5 Screw M6 Door pin Screws M8 Handle lock Casters Feet Latches

Top cover Bottom Side panel Rear door Glass door Frame Vertical profile Horizontal profile

Width 800mm

Cube Lock tap

Split door & door pin

Step 1: Fix 4pcs casters with M5 screw on the bottom panel; Fix the latch and lock;

M5 x 16pcs

Fix handle latches on the side panel

Outside

Fix handle lock on the doors

Split door please check next tap

Outside

Top and bottom

Outside

Fix handle lock on the doors
Fasten the door pin on the lock

Please note the location of door pin

Step 2: Fix the top cover and bottom on frames with M8 screw;

Bottom


M8 x 8sets

Top cover


M8 x 8sets

Assembly instructions


Step 3: Fix the horizontal mounting rails with M5 screw;

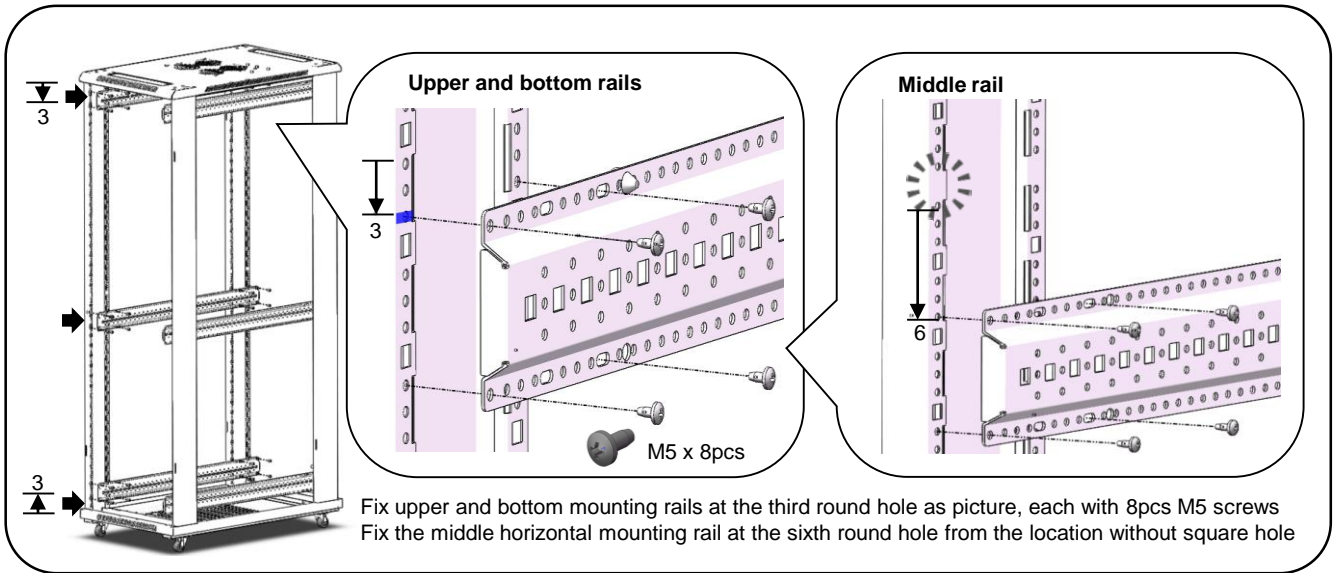

Step 4: Fix the mounting profile with M5 screw; 800mm cabinet fixed the cube first.

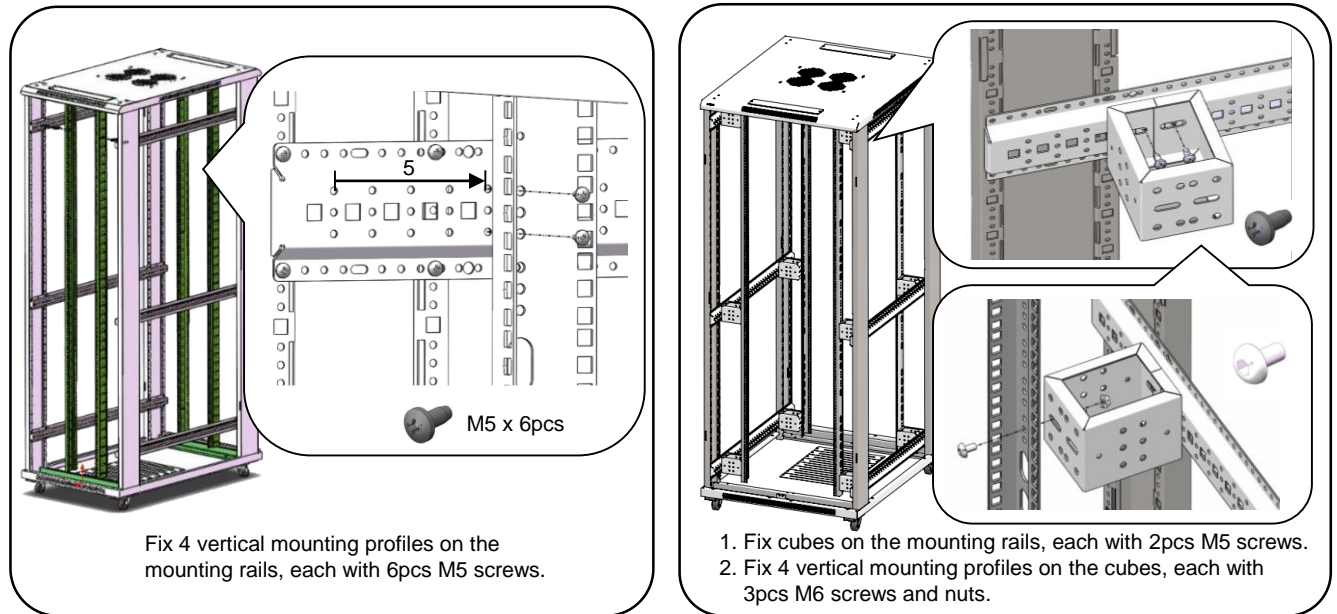

Step 5: Fix doors and side panels ;

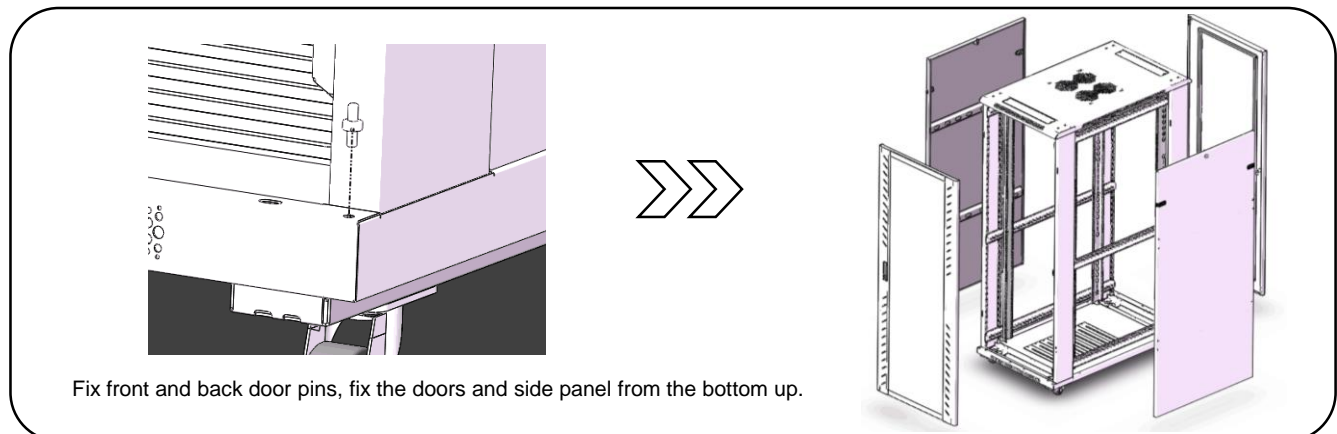

Complete! Thank you!